



at&t

Quick start guide

 
E598-2

**5.8 GHz expansion handset for
use with AT&T models E5901/
E5902B/E5903B/ E5911/
E5912B/E5913B/E5914B/
E5921/E5922B/E5923B/E5924B/
E6001/E6002B/E6012B/E6013B/
E6014B/E3813B**


 
 
 


Quick reference guide

Handset

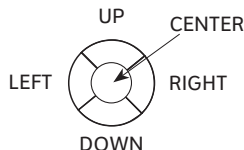

MENU/SELECT

Press to display the menu. Once in the menu, press to select an item or save an entry or setting. Press  or  to scroll up or down while in menus. While entering names or numbers, press  or  to move the cursor to the left or right.

CID

Press to display caller ID information.

PHONE/FLASH

Press to make or answer a call. During a call, press to receive an incoming call if call waiting is activated.

MUTE/DELETE

While on a call, press to mute microphone. While reviewing the call log, press to delete an individual entry, or press and hold to clear the caller ID log. While predialing, press to delete digits from a string.

SPEAKER

Press to activate handset speakerphone. Press again to resume normal handset use.

DIR

Press to display directory entries.

OFF/CLEAR

 
During a call, press to hang up. While using menus, press to cancel an operation, back up to the previous menu, or exit the menu display.

REDIAL/PAUSE

Press to view redial memory. While entering numbers, press and hold to insert a dialing pause.

INT


Press to initiate an intercom conversation or transfer a call.

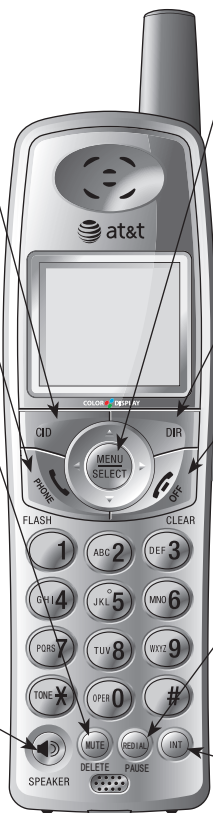


Battery installation & charging

After battery installation, the battery may have enough charge to allow for some calls. For best performance, place the handset in the charger or telephone base and allow it to charge for 16 hours before use. You can keep the battery charged by returning the handset to the charger or the telephone base after each use. When the battery is fully depleted, a recharge takes about 12 hours. The average talk time on a fully charged battery is about eight hours depending on environmental conditions, and the standby time when idle is approximately five days.

 1. Plug the small end of the smaller power adapter into the jack on the underside of charger, then route the cord through the slot as shown.

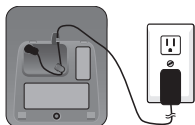

 2. Plug the large end of the smaller power adapter into an electrical outlet.

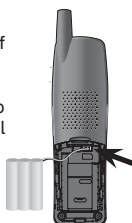

3. Plug the battery securely into the plug inside the handset battery compartment, matching the color-coded label.



4. Place the battery and wires neatly inside the compartment.



5. Slide battery compartment cover towards the center until it clicks closed.



6. The battery may have enough charge to allow for some calls. For best performance, place handset in the telephone base or charger to charge for at least 16 hours before first use.



Low battery indicator

Return handset to the telephone base or charger to recharge when this symbol flashes. (Handset will beep when battery is low.)

To replace the battery, press in and downward on the tab to open the battery compartment cover. Then lift out the old battery and disconnect. Follow the instructions on this page to install and charge the new battery.



Caution: Use only the supplied rechargeable battery or AT&T replacement battery model 27910 (part number 89-0099-00-00). To order, visit our website at www.telephones.att.com or call 1 (800) 222-3111. In Canada dial 1 (866) 288-4268.

Adding and registering handsets

Before using a new E598-2 handset, you must register it with your E5901/E5902B/E5903B/E5911/E5912B/E5913B/E5914B/E5921/E5922B/E5923B/E5924B/E6001/E6002B/E6012B/E6013B/E3813B or E6014B telephone base (purchased separately). The E5901/E5902B/E5903B/E5911/E5912B/E5913B/E5914B/E5921/E5922B/E5923B/E5924B/E6001/E6002B/E6012B/E6013B/E3813B or E6014B can accommodate up to four cordless handsets.

 
The handset provided with the E5901/E5911/E5921 or E6001 is automatically registered as handset 1. Additional handsets will be assigned numbers in the order they are registered (handset 2, handset 3 and handset 4). You can register a maximum of four handsets.

The E5902B/E5912B/E5922B/E6002B or E6012B has two handsets automatically registered as handset 1 and 2. You can register two additional handsets, which will be assigned numbers 3 and 4.

The E5903B/E5913B/E5923B/E3813B or E6013B has three handsets automatically registered as handsets 1, 2 and 3. You can register one additional handset, which will be assigned number 4.

The E5904B/E5914/E5924B/E6014B has four pre-registered handsets, so you cannot register any additional handsets to it.

Adding and registering handsets

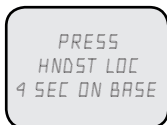

Before using a new E598-2 handset, you must register it with the telephone base. Each handset must be registered separately.

To register a handset to your telephone base

When first purchased, the expansion handset will show **NOT REGISTERED** on the screen. The new handset may need to be charged for five minutes before registering to the main telephone base.

1. Place the unregistered handset into the telephone base. If **PRESS HNDST LOC 4 SEC ON BASE** does not appear on the handset screen after a few seconds, lift up handset and place it in the telephone base again.
2. On the telephone base, press and hold **HANDSET LOCATOR** for about four seconds (until the red **IN USE** light on the telephone base turns on) and then release the button. The handset will show **PLEASE WAIT....** and will take about 10 seconds to complete the registration. The handset will show **HS X REGISTERED** and will beep if the registration was successful.



NOTES:

1. If the registration was not successful the display will show **NOT REGISTERED**. To reset the handset, lift the handset out of the telephone base or charger and replace it. Try the registration process again.
2. You cannot register a handset if any phone connected to your phone line is in use.

Replacing a handset

You may need to de-register your handsets if:

You have the maximum number of registered handsets (four) and you need to replace a handset.





- OR -

You wish to change the designated handset number of your registered handsets.

You must first de-register ALL the handsets, and then re-register ALL the handsets you wish to use.

Please read carefully through all the instructions on this page before beginning the de-registration process.

To de-register all handsets



1. Press and hold  **HANDSET LOCATOR** on the telephone base for about 10 seconds (until the **IN USE** light turns on and starts to flash), then release the  **HANDSET LOCATOR** button.
2. Immediately press and release  **HANDSET LOCATOR** again. You must press  **HANDSET LOCATOR** while the **IN USE** light is still flashing. (The light flashes for about seven seconds.)
3. The handset(s) will show **CONNECTING...** and it will take about 10 seconds to complete de-registration. ALL handsets will show **NOT REGISTERED** if de-registration was successful.



4. To re-register the handset(s) to the telephone base, follow the registration instructions on page 3-4.



NOTES:

1. If the de-registration process was not successful, you may need to reset the system and try again. To reset: pick up any registered handset and press the  **PHONE/FLASH** button, then press the  **OFF/CLEAR** button and place the handset back into the base. You may also reset by unplugging the power from the telephone base and plug it back in.
2. You cannot de-register the handset(s) if any phone connected to your phone line is in use.



www.telephones.att.com