

Congratulations

on your purchase of this AT&T product. Before using this AT&T product, please read the **Important safety information** section on pages 1-3 of this manual.

Both the model and serial numbers of your AT&T product can be found on the bottom of the telephone base. Save your sales receipt and original packaging in case it is necessary to return your telephone for warranty service.

For customer service, please visit our website at <https://telephones.att.com> or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.



Please refer to the online **TL86103** DECT 6.0 2-line corded/cordless telephone/answering system with BLUETOOTH® wireless technology Complete user's manual for a full set of installation and operation instructions at <https://telephones.att.com/manuals>.

Parts checklist

Your telephone package contains the following items.



Quick start guide



Telephone base



Power adapter for telephone base



Corded handset with coiled handset cord attached



Cordless handset



Power adapter for handset charger



Charger for cordless handset



Belt clip for cordless handset



Battery compartment cover



Battery for cordless handset



Telephone line cords (one black and one clear)

Important safety information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety information

- ▶ Read and understand all instructions in the user's manual. Observe all markings on the product.
- ▶ Avoid using a telephone during a thunderstorm. There may be a slight chance of electric shock from lightning.
- ▶ Do not use a telephone in the vicinity of a gas leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. In an inadequately ventilated environment, the user should not plug the phone into a power outlet, nor put a charged handset into the cradle where there are concentrations of flammable or flame-supporting gases. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- ▶ Do not use this product near water or when you are wet. For example, do not use it in a wet basement or shower, nor next to a swimming pool, bathtub, kitchen sink and laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquid, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- ▶ Install this product in a protected location where no one can trip over any line or power cords. Protect cords from damage or abrasion.
- ▶ If this product does not operate normally, see the **Troubleshooting** section of the online Complete user's manual. If you cannot solve the problem, or if the product is damaged, refer to the **Limited warranty** section (pages 36 - 38). Do not open this product except as directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.
- ▶ Replace batteries, only as described in your user's manual (Page 6). Do not burn or puncture batteries — they contain caustic chemicals.
- ▶ This power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
- ▶ For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Important safety information



CAUTIONS:

- ▶ Use only the power adapter provided with this product. To obtain a replacement, visit our website at **<https://telephones.att.com>** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.
- ▶ Use only the supplied rechargeable battery or replacement battery (model BT183342/BT283342). To order, visit our website at **<https://telephones.att.com>**, or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.



CAUTION: To prevent risk of fire or battery explosion, replace with the correct battery type. Dispose of used batteries according to the instructions.

Especially about cordless telephones

- ▶ **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the handset by radio waves, so there is a possibility that your cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- ▶ **Electrical power:** The telephone base of this cordless telephone must be connected to a working electrical outlet which is not controlled by a wall switch. Calls cannot be made from the handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- ▶ **Potential TV interference:** Some cordless telephones operate at frequencies that may cause interference to TVs and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.
- ▶ **Rechargeable batteries:** This product contains nickel-metal hydride rechargeable batteries. Exercise care in handling batteries in order not to create a short circuit with conductive material such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.
- ▶ **Nickel-metal hydride rechargeable batteries:** Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

Important safety information



The RBRC Seal means that the manufacturer is voluntarily participating in an industry program to collect and recycle nickel-metal hydride rechargeable batteries when taken out of service within the United States. These batteries may be taken to a participating local retailer of replacement batteries or recycling center. You may call 1-800-8-BATTERY® for locations accepting spent Ni-MH batteries.

The RBRC Seal and 1-800-8-BATTERY® are registered trademarks of Call2recycle, Inc.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless telephones):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients:

- ▶ Should keep wireless telephones at least six inches from the pacemaker.
- ▶ Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- ▶ Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ECO mode

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

Especially about telephone answering systems

Two-way recording: This unit does not sound warning beeps to inform the other party that the call is being recorded. To ensure that you are in compliance with any federal or state regulations regarding recording a telephone call, you should start the recording process and then inform the other party that you are recording the conversation.


SAVE THESE INSTRUCTIONS



Install

Telephone base

Option 1: If you have separate wall jacks for each line, plug the telephone lines, as shown below.

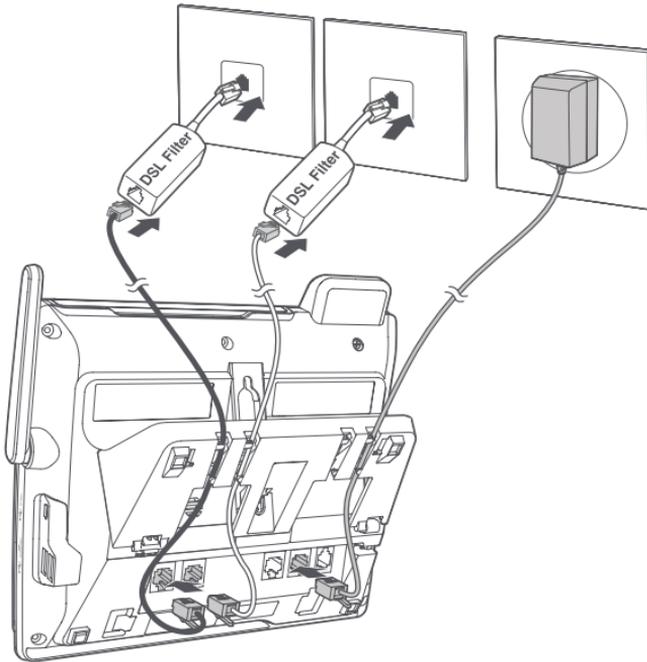


Notes:

- ▶ Plug one end of the telephone line cord into a telephone jack or a DSL filter.
- ▶ If you have DSL high-speed Internet service, a DSL filter (not included) is required.


Install

Telephone base

Option 2: If you have a 2-line wall jack, plug the 4-conductor black telephone line, as shown below.

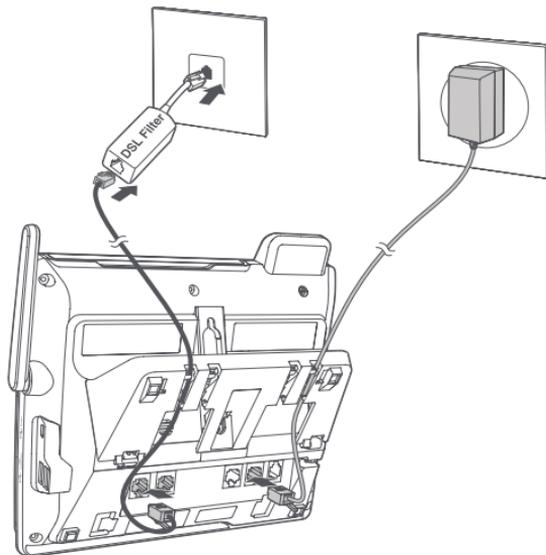

Charger

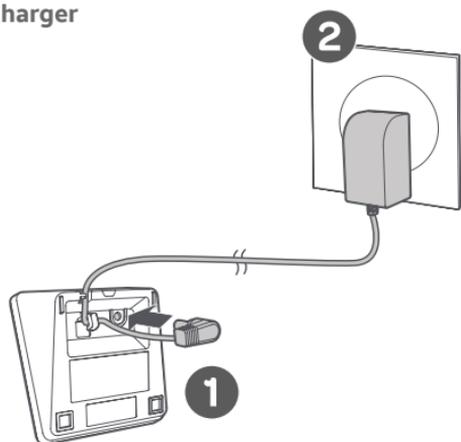

Caution: Use only the power adapter(s) provided with this product. To obtain a replacement, visit our website at

<https://telephones.att.com>


or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.




Install

Battery

Install the battery, as shown below.

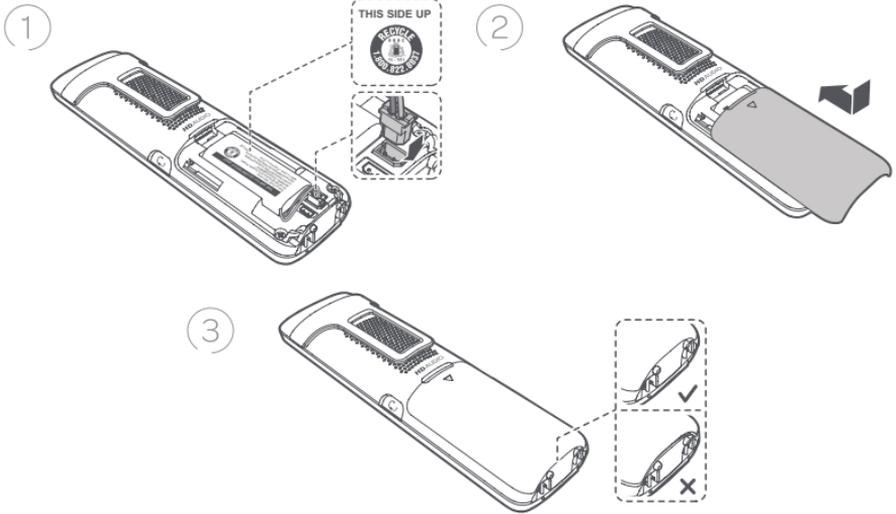

Charge the cordless handset by placing it face forward in the charger. The **CHARGE** light on the top of the handset is on during charging. Charge your handset(s) before initial use. The battery is fully charged after 11 hours of continuous charging.

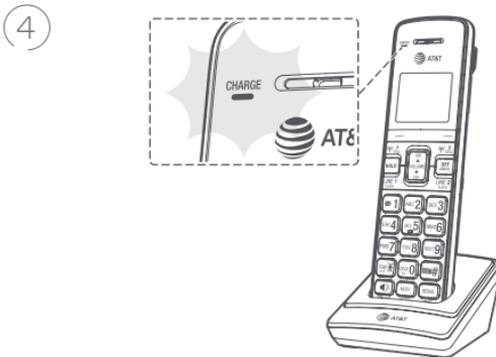


Caution: Use only the supplied rechargeable battery or replacement battery (model BT183342/BT283342).




Install

Belt clip & optional cordless handset

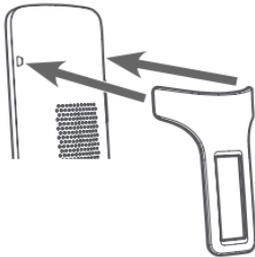

To attach the belt clip:


Snap the belt clip into the slots on both sides of the cordless handset.

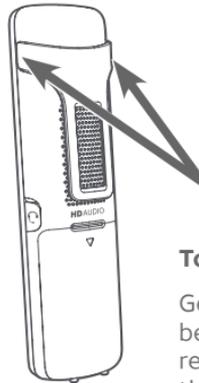

To remove the belt clip:

Gently lift either of the belt clip tabs outwards to remove the belt clip from the handset.

For handsfree telephone conversations, you can use any industry standard 2.5 mm headset (purchased separately). For best results, use an AT&T 2.5 mm headset. To purchase a headset, visit our website at <https://telephones.att.com> or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

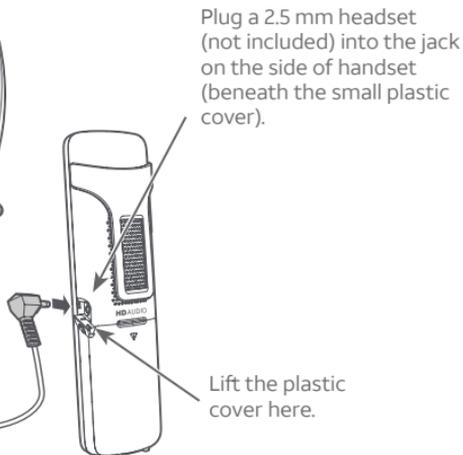


Plug a 2.5 mm headset (not included) into the jack on the side of handset (beneath the small plastic cover).

Lift the plastic cover here.



Handset overview

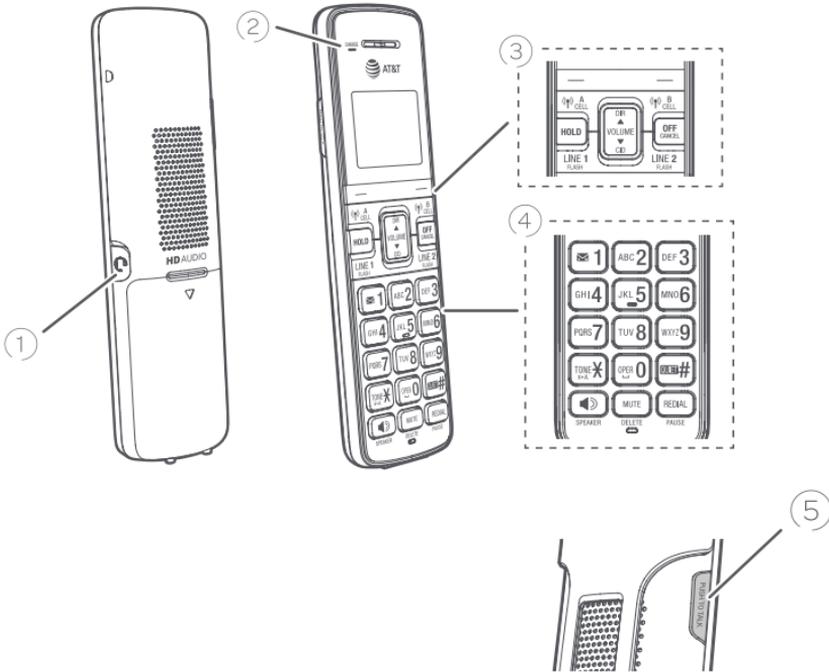

Handset

- 1
Headset jack
 - › Plug a 2.5 mm headset (not included) into the jack for handsfree telephone conversations.

- 2
CHARGE light
 - › Steadily on when the handset is charging in the charger.

- 3
Softkeys (2)
 - › Press to select the menu item displayed above the key).
 - › While in a menu, press to select an item or save an entry or setting.

- 
A CELL

B CELL
 - › Press to make or answer a cell call.
 - › During a cell call, press to answer an incoming cell A or cell B line call when you receive a call waiting alert.

- HOLD**
 - › During a call, press to put the current call on hold.



Handset overview

Handset

3

▲DIR/ VOLUME

- › Press to show directory entries when the telephone is not in use.
- › Press to scroll up while in menus.
- › While entering names or numbers in the directory, press to move the cursor to the right.
- › Press to increase the listening volume when on a call, or to increase the message playback volume.

▼CID/ VOLUME

- › Press to show the caller ID log when the telephone is not in use.
- › Press to scroll down while in menus.
- › While entering names or numbers in the directory, press to move the cursor to the left.
- › Press to decrease the listening volume when on a call, or to decrease the message playback volume.

OFF/CANCEL

- › During a call, press to hang up.
- › While in a menu, press to cancel an operation, return to the previous menu, or exit the menu display. You can also press and hold this button to return to idle mode.
- › When the handset is ringing, press to mute the ringer temporarily.
- › Press and hold while the telephone is not in use to erase the missed call indicator.

LINE 1/ FLASH/LINE 2/FLASH

- › Press **LINE 1/FLASH** to make or answer a call on line 1. During a call, press to answer an incoming call on line 1 when you receive a call waiting alert.
- › Press **LINE 2/FLASH** to make or answer a call on line 2. During a call, press to answer an incoming call on line 2 when you receive a call waiting alert.

4



- › While reviewing a caller ID log entry, press repeatedly to add or remove **1** in front of the telephone number before dialing or saving it in the directory.
- › Press and hold to set or dial your voicemail number.




Handset overview

Handset

- ④ **TONEX/a>A**
- › Press to switch to tone dialing temporarily during a call if you have pulse service.
 - › Press to switch between upper case and lower case while entering characters.
- QUIET # (pound key)**
- › Press repeatedly to display other dialing options when reviewing a caller ID log entry.
 - › Press and hold to enter the **QUIET** mode setting screen, or to deactivate **QUIET** mode.
 - › Press to toggle the name order when saving a caller ID log entry into directory.
- 🔊)/SPEAKER**
- › Press to make a call on line 1 or line 2 using the handset speakerphone.
 - › Press to answer a call on line 1 or line 2, cell A, or cell B line using the handset speakerphone.
 - › Press to switch between the handset speakerphone and the normal cordless handset use during a call.
- MUTE/DELETE**
- › During a call, press to mute the microphone.
 - › While the telephone base is ringing, press to mute the ringer temporarily.
 - › While reviewing the redial list, directory, or caller ID log, press to delete an individual entry.
 - › While predialing, press to delete digits.
 - › While entering or editing a directory entry, press to erase a digit or character; or press and hold to erase all digits or characters.
- REDIAL/PAUSE**
- › Press repeatedly to view the last 10 numbers dialed.
 - › While entering numbers, press and hold to insert a dialing pause.
-
- ⑤ **PUSH TO TALK**
- › Press to initiate a one-to-one or one-to-group broadcast.
 - › Press and hold to broadcast to a group of system devices.



Telephone base overview

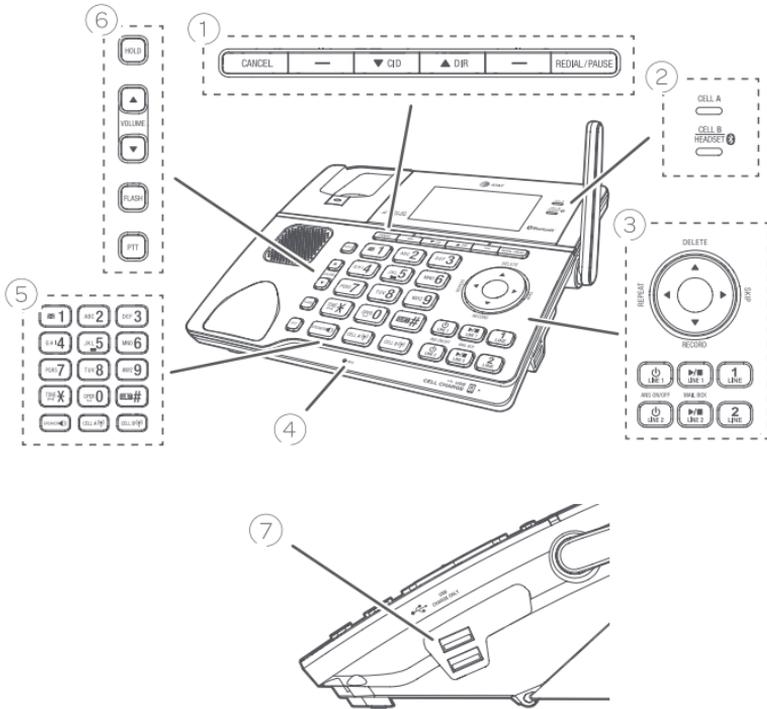

Telephone base

- ① **CANCEL**
- While in a menu, press to exit without making changes; or press and hold to return to idle mode.
 - Press and hold while the telephone is not in use to erase the missed call indicator.
- Softkeys (2)**
- Press to select the menu item displayed above the key.
- ▼CID**
- Press to scroll down while in a menu.
 - Press to review the caller ID log when the telephone is not in use.
- ▲DIR**
- Press to scroll up while in a menu.
 - Press to show directory entries when the telephone is not in use.



Telephone base overview

Telephone base

①

REDIAL/PAUSE

- ▶ Press repeatedly to view the last 10 numbers dialed.
 - ▶ While entering numbers, press and hold to insert a dialing pause.
-

②

CELL A light

- ▶ Steadily on when the telephone base is paired and connected with a Bluetooth device on Cell A line.
- ▶ Flash alternately while pairing a Bluetooth device.

CELL B/ HEADSET light

- ▶ Steadily on when the telephone base is paired and connected with a Bluetooth device on Cell B line.
 - ▶ Flash alternately while pairing a Bluetooth device.
-

③

◀/REPEAT

- ▶ Press to repeat a message.
- ▶ Press twice to play the previous message.
- ▶ While editing names or numbers, press to move the cursor to the left.

▲/DELETE

- ▶ Press to delete the message currently playing.
- ▶ When the phone is not in use, press to access the **DELETE OLD MSGS** menu.
- ▶ While entering names or numbers, press to delete a digit or a character.
- ▶ While predialing, press to delete a digit.
- ▶ Press to scroll up while in a menu.

▶/SKIP

- ▶ During message playback, press to skip to the next message.
- ▶ While editing names or numbers, press to move the cursor to the right.

▼/RECORD

- ▶ Press to record an announcement or a memo.
- ▶ Press to scroll down while in a menu.

⓪/LINE 1 ANS ON/OFF ⓪/LINE 2 ANS ON/OFF

- ▶ Press to turn the answering systems of line 1 or line 2 on or off.



Telephone base overview

Telephone base

3

▶/■/LINE 1
MAILBOX
▶/■/LINE 2
MAILBOX

- ▶ Press to play line 1 or line 2 messages.
- ▶ Press to stop playing line 1 or line 2 messages.

1 LINE/2 LINE

- ▶ Press to make or answer a call on line 1 or line 2.
 - ▶ Flashes slowly when a call on line 1 or line 2 is on hold.
-

4

Microphone

5

✉ 1

- ▶ While reviewing a caller ID log entry, press repeatedly to add or remove **1** in front of the telephone number before dialing or saving it in the directory.
- ▶ Press and hold to set or dial your voicemail number.

TONEX/a>A

- ▶ Press to switch to tone dialing temporarily during a call if you have pulse service.
- ▶ Switch between upper case and lower case while entering characters.

**QUIET #
(pound key)**

- ▶ Press repeatedly to display other dialing options when reviewing a caller ID log entry.
- ▶ Press and hold to enter the **QUIET** mode setting screen, or to deactivate **QUIET** mode.

SPEAKER 📣

- ▶ Press to make a call on line 1 or line 2 using the speakerphone.
- ▶ Press to answer a call on line 1, line 2, cell A, or cell B line using the speakerphone.
- ▶ Press to switch between the corded handset and speakerphone.

CELL A 📶 / **CELL
B** 📶

- ▶ Press to make or answer a cell call.
- ▶ During a cell call, press to answer an incoming call when you receive a call waiting alert.
- ▶ Flashes quickly when there is an incoming cell call.
- ▶ Flashes slowly when a cell call is on hold.



Telephone base overview

Telephone base

6

HOLD

- › During a call, press to put the current call on hold.

▼/VOLUME/▲

- › Press to adjust the volume during message playback.
- › Press to adjust the listening volume during a call.
- › When the phone is not in use, press to adjust the telephone base ringer volume for all lines.

FLASH

- › During a call on line 1 or line 2, press to answer an incoming call on the other line when you receive a call waiting alert.

PTT

- › Press to initiate a one-to-one or one-to-group broadcast.
 - › Press and hold to broadcast to a group of system devices.
-

7

USB charging ports

- › Two standard size USB ports in the telephone base for charging your cell phones.



Initial basic settings

Line power mode (no AC power)

This telephone provides minimal functionality during a power failure. When AC power is not available, the screen is blank and many telephone features do not function. Only touch-tone dialing and corded handset volume adjustment are supported. The telephone uses power from the telephone line to enable you to make and answer calls on **Line 1** only using the corded handset and dialing keys.

After you install your telephone or the power returns following a power outage, the telephone base or cordless handset will prompt you to set the date and time. To skip setting the date and time, press **CANCEL** or **BACK** on the telephone base, or press **OFF/CANCEL** or **BACK** on the corded handset.

We recommend you program your telephone system before use. The following are a few examples of common features to set before using the telephone. Refer to the **Handset and telephone base settings** and **Answering system settings** in the Complete user's manual for detailed instructions on setting all telephone features.

Date and time



Note: Set the date/time before using the answering system.

Using a cordless handset or the telephone base:

1. Press **MENU** -> Press **▼/▲** to **Set date/time** -> Press **SELECT**.
2. Enter the month (**MM**), day (**DD**) and year (**YY**) -> Press **NEXT**.
3. Enter the hour (**HH**) and minute (**MM**).
4. Press **▼/▲** to choose **AM** or **PM** -> Press **SAVE**.



Initial basic settings

Add a Bluetooth® cell phone/headset



Note: Your **TL86103** is compatible with Bluetooth version 2.0 or above devices.

To use a Bluetooth enabled cellular phone or headset with your telephone, you must first pair and connect your Bluetooth cellular phone or headset with the telephone base.

Bluetooth wireless technology operates within a short range (up to 30 feet). Keep the connected device within 15 feet of the telephone base for optimal performance.

To pair and connect a cell phone using the telephone base:

1. Press **MENU** -> Press ▼/▲ to **Bluetooth** -> Press **SELECT**.
2. Press **SELECT** to select **Add device**.
3. Press **SELECT** to select **Add cellular**.
4. Disconnect the cell phone from any Bluetooth device -> Press **NEXT**.
5. Place the cell phone next to the telephone base.
6. Press **NEXT** to turn on the telephone base discoverable mode.
7. Turn on the Bluetooth feature of your cell phone and search for or add new devices. Once your cell phone finds your AT&T phone (**AT&T DECT 6.0**), press the appropriate key on your cell phone to continue the pairing process.
 - ▶ Enter the cell phone passcode (typically **0000**), if required -> **SET**.
 - ▶ Enter the PIN (default PIN: **0000**) of the telephone base into your cell phone, if required.

To pair and connect a headset using the telephone base:

1. Press **MENU** -> Press ▼/▲ to **Bluetooth** -> Press **SELECT**.
2. Press **SELECT** to select **Add device**.
3. Press ▼/▲ to **Add headset** -> Press **SELECT**.
4. Disconnect your headset from any Bluetooth device -> Press **NEXT**.
5. Set your headset to discoverable mode -> Press **NEXT**.
6. Press ▼/▲ to choose your headset, if required -> Press **SELECT**.
 - ▶ Enter the PIN (typically **0000**) of your headset, if required, and press **NEXT**.



Initial basic settings

Record your own announcement

Your outgoing announcement plays when calls are answered by the answering system. You can use the preset announcement to answer calls, or replace it with your own recorded announcement.

Using the telephone base:

1. Press **MENU** -> Press **SELECT** to select **Answering system**.
2. Press **▼/▲** to highlight **Mailbox 1** or **Mailbox 2** -> Press **SELECT**.
3. Press **SELECT** to select **Announcement**.
4. Press **SELECT** to select **Record annnc**.
5. Speak towards the microphone of the telephone base to record your announcement and press **STOP** to end recording.

Number of rings

You can set the answering system to answer an incoming call after a number of rings. You can also select toll saver to answer a call after two rings when you have new messages, or four rings when you have no new messages. This feature allows you to check for new messages and avoid paying long distance charges when calling from out of your local area. By default, the answering system answers an incoming call after four rings.

Using the telephone base:

1. Press **MENU** -> Press **SELECT** to select **Answering system**.
2. Press **▼/▲** to highlight **Mailbox 1** or **Mailbox 2** -> Press **SELECT**.
3. Press **▼/▲** to **Ans system setup** -> Press **SELECT**.
4. Press **▼/▲** to **# of rings** -> Press **SELECT**.
5. Press **▼/▲** to choose among **6, 5, 4, 3, 2**, or **Toll saver** -> Press **SELECT**.

To use voicemail (requires service subscription)

You can save the voicemail number to  **1** for easy access. Contact your telephone service provider for more information and assistance about using your voicemail service.

To set voicemail number:

Using a cordless handset or the telephone base:

1. Press **MENU** -> Press **SELECT** to select **Settings**.
2. Press **▼/▲** to highlight **Voicemail #** -> Press **SELECT**.



Initial basic settings

3. Press ▼/▲ to highlight **Line 1** or **Line 2** -> Press **SELECT**.
4. Enter the voicemail number -> Press **SAVE**.

To retrieve voicemail messages:

1. Press and hold  **1**.
2. Press ▼/▲ to highlight **Line 1** or **Line 2** -> Press **SELECT**.

Ringer volume

You can set the ringer volume level to one of the six levels or turn the ringer off.

Using a cordless handset or the telephone base:

1. Press **MENU** -> Press ▼/▲ to **Ringers** -> Press **SELECT**.
2. Press **SELECT** to select **Ringer volume**.
3. Press ▼/▲ to highlight **All lines, Line 1, Line 2, Cell A, Cell B,** or **PC call**, and then press **SELECT**.
4. Press ▼/▲ to choose the desired level -> Press **SET**.

LCD language

Using a cordless handset or the telephone base:

1. Press **MENU** -> Press ▼/▲ to **Settings** -> Press **SELECT**.
2. Press **SELECT** to choose **LCD language**.
3. Press ▼/▲ to highlight **English, Français** or **Español** -> Press **SELECT**. The screen prompts **Set English/Français/Español as LCD language?**
4. Press **YES** to confirm, or press **NO** to cancel the operation.



Note: If you accidentally changed the LCD language to French or Spanish, you can reset it back to English without going through the French or Spanish menus.

- ▶ Press **MENU** on the cordless handset or telephone base in idle mode, and then enter **364#**.
- ▶ To reset the LCD language back to English during a call, press **OPTION** on the cordless handset or telephone base, and then enter **364#**.



Operate

The **TL86103** telephone base can be used to make or answer calls on up to two individual landlines, or on the cell lines. You can connect a maximum of 2 Bluetooth enabled cell devices to the telephone base. Both cell devices can be used on two cell lines at the same time.

Operation	Steps
Make a call on line 1 or line 2	<p>Using a cordless handset:</p> <ul style="list-style-type: none">▶ Press LINE 1/FLASH, LINE 2/FLASH, or /SPEAKER, and then enter the telephone number. <p>Using the telephone base:</p> <ul style="list-style-type: none">▶ Press 1 LINE, 2 LINE, or SPEAKER , and then enter the telephone number. <p>-OR-</p> <ul style="list-style-type: none">▶ Lift the corded handset, and then enter the telephone number.
To redial a call on line 1 or line 2	<p>Using a cordless handset:</p> <ul style="list-style-type: none">▶ Enter the telephone number, and then press LINE 1/FLASH, LINE 2/FLASH, or /SPEAKER. <p>Using the telephone base:</p> <ul style="list-style-type: none">▶ Enter the telephone number, and then press 1 LINE, 2 LINE, or SPEAKER .
To answer a call on line 1 or line 2	<p>Using a cordless handset:</p> <ul style="list-style-type: none">▶ Press LINE 1/FLASH, LINE 2/FLASH, /SPEAKER, or any dialing key (0-9 or TONE . <p>Using the telephone base:</p> <ul style="list-style-type: none">▶ Press 1 LINE, 2 LINE, SPEAKER , or any dialing key (0-9 or TONE . <p>-OR-</p> <ul style="list-style-type: none">▶ Lift the corded handset.



Operate

Operation	Steps
To end a call on line 1 or line 2	<p>Using a cordless handset:</p> <ul style="list-style-type: none">▶ Press OFF/CANCEL, or place the cordless handset into the charger. <p>Using the telephone base:</p> <ul style="list-style-type: none">▶ Press the corresponding line button, 1 LINE or 2 LINE. <p>-OR-</p> <ul style="list-style-type: none">▶ Press SPEAKER ) or return the corded handset to the telephone base.
To make a cell call	<p>Using a cordless handset:</p> <ol style="list-style-type: none">1. Press (📶) A CELL or (📶) B CELL, and then enter the telephone number.2. Press DIAL, ) / SPEAKER, (📶) A CELL, or (📶) B CELL to dial. <p>Using the telephone base:</p> <ol style="list-style-type: none">1. Press CELL A ) or CELL B ) , and then enter the telephone number.2. Press DIAL or SPEAKER ).
To redial a cell call	<p>Using a cordless handset:</p> <ul style="list-style-type: none">▶ Enter the telephone number, and then press (📶) A CELL or (📶) B CELL.
To answer a cell call	<p>Using a cordless handset:</p> <ul style="list-style-type: none">▶ Press ) / SPEAKER, (📶) A CELL, or (📶) B CELL. <p>Using the telephone base:</p> <ul style="list-style-type: none">▶ Press SPEAKER ) , CELL A ) , or CELL B ) . <p>-OR-</p> <ul style="list-style-type: none">▶ Lift the corded handset.



Operate

Operation	Steps
To end a cell call	<p>Using a cordless handset:</p> <ul style="list-style-type: none">▶ Press OFF/CANCEL, or place the cordless handset into the charger. <p>Using the telephone base:</p> <ul style="list-style-type: none">▶ Press the corresponding cell button, CELL A (📶) or CELL B (📶). <p>-OR-</p> <ul style="list-style-type: none">▶ Press SPEAKER (🔊) or return the corded handset to the telephone base.
Handset speakerphone	During a call, press (🔊)/ SPEAKER to switch between handsfree speakerphone and normal handset use.
Redial	<p>Using a cordless handset:</p> <ol style="list-style-type: none">1. Press REDIAL/PAUSE in idle mode.2. Press ▼CID, ▲DIR, or REDIAL/PAUSE repeatedly to browse until the desired number displays. The handset beeps twice at the end of the list.3. Press LINE 1/FLASH, LINE 2/FLASH, or (🔊)/SPEAKER to dial using line 1 or line 2, or press (📶) A CELL or (📶) B CELL to dial using the cell line. <p>Using the telephone base:</p> <ol style="list-style-type: none">1. Press REDIAL/PAUSE in idle mode.2. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to browse until the desired number displays. The telephone base beeps twice at the end of the list.3. Press LINE 1, LINE 2, or SPEAKER (🔊) to dial using line 1 or line 2, or press Cell A (📶) or CELL B (📶) to dial using the cell line.
Volume control	<p>To adjust the listening volume of a cordless handset:</p> <ul style="list-style-type: none">▶ Press ▼/▲ while on a call. <p>To adjust the listening volume of the telephone base:</p> <ul style="list-style-type: none">▶ Press ▼/VOLUME/▲ while on a call.



Operate

Operation	Steps
Call waiting (Requires subscription from telephone)	<p>Call waiting on line 1 or line 2</p> <p>Using a cordless handset or the telephone base:</p> <ul style="list-style-type: none">▶ Press the corresponding line button, LINE 1/FLASH or LINE 2/FLASH on the handset, or FLASH on the telephone base to put your current call on hold and take the new call.▶ Press the same key at any time to switch back and forth between calls. <p>Call waiting on the cell line</p> <p>To answer the incoming call from the same cell line:</p> <p>Using a cordless handset:</p> <ul style="list-style-type: none">▶ Press SWAP, (A) CELL or (B) CELL on the handset. The original call is put on hold and you take the new call.▶ Press OPTION on the handset. Press ▼CID or ▲DIR to highlight Swap cell X (X represents the cell line slot). Press SELECT to resume the original call. The other incoming cell call is put on hold. <p>Using the telephone base:</p> <ul style="list-style-type: none">▶ Press SWAP, CELL A (A) or CELL B (B) on the telephone base. The original call is put on hold and you take the new call.▶ Press OPTION on the telephone base. Press ▼CID, ▲DIR, ▼/RECORD, or ▲/DELETE to highlight Swap cell X (X represents the cell line slot). Press SELECT to resume the original call. The other incoming cell call is put on hold.



Directory

The home directory stores up to 200 entries.

Operation	Steps
To add an entry in the home directory	<p>Using a cordless handset or the telephone base:</p> <ol style="list-style-type: none">1. Press MENU -> Press ▼/▲ to Directory -> SELECT.2. Press OPTION to select Home.3. Press SELECT to select Add contact.4. Enter a telephone number -> Press NEXT.5. Press ▼/▲ to select Home, Cell, Work, or Other -> Press NEXT.6. Enter a name -> Press SAVE.
Searching/dialing an entry	<p>Using a cordless handset or the telephone base:</p> <ol style="list-style-type: none">1. Press ▲DIR on the handset or the telephone base in idle mode -> Press ▼/▲ to select the desired directory -> Press REVIEW.2. Press ▼/▲ to browse through the directory, or press the dialing keys to start a name search.3. Press LINE 1/FLASH, LINE 2/FLASH, or ◀/SPEAKER on the handset, or press 1 LINE or 2 LINE on the telephone base, or lift the corded handset to dial with line 1 or line 2. <p>-OR-</p> <p>Press ☎ A CELL or ☎ B CELL on the handset, or press CELL A or CELL B on the telephone base call using the cell line.</p>

Directory

Download a cell phone directory

To download a cell phone directory using the telephone base:

Before downloading a directory, make sure the cell phone is paired, active, and connected to your **TL86103**.

For certain cell phones, you may need to press a key to confirm the directory download.

1. Press **MENU** -> Press ▼/▲ to **Bluetooth** -> Press **SELECT**.
2. Press ▼/▲ to **Download dir** -> Press **SELECT**.
3. Press ▼/▲ to choose among **Phone memory**, **SIM card only**, or **Phone and SIM** -> Press **SELECT**.
4. Press **NEXT** to start downloading.
 - ▶ Enter the cell phone passcode, if necessary, and then press **SET**.
 - ▶ Press a key on your cell phone to confirm the directory download.
5. Press **OK** to exit.

Bluetooth

Connect to Cell™ app

If you are using Bluetooth-enabled cell phones with Android® OS 2.3 or above, you may also download the **Connect to Cell™** application (consists of **Caller ID manager** and **Alerts manager**) using the Google Play® Store app to extend the flexibility of your **TL86103**. Scan the QR code on the right to download the application.





Caller ID

This product supports caller ID services offered by most telephone service providers. The telephone stores caller ID information of the last 50 incoming calls in the telephone base. This information is common to all devices.

Caller ID announce

When this feature is on and you have an incoming call, the handset and the telephone base speaks “*Call from...*” and the name of the caller based on the directory or caller ID information. The default setting of caller ID announce feature is **On**. You can turn this feature off.

Using the telephone base:

1. Press **MENU** in idle mode to enter the main menu.
2. Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to highlight **Caller ID Annc**, and then press **SELECT**.
3. Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to choose **On** or **Off**, and then press **SELECT**. You hear a confirmation tone and the screen shows **CID Annc ON/OFF on all HS & BS** briefly before returning to the previous menu.

Review and dial a number in the call log

Using a cordless handset or the telephone base:

1. Press **▼CID** on the handset or the telephone base in idle mode -> Press **▼/▲** to scroll through the list.
2. Press **LINE 1/FLASH, LINE 2/FLASH**, or **☎/SPEAKER** on the handset, or press **1 LINE** or **2 LINE** on the telephone base, or lift the corded handset to dial with line 1 or line 2.

-OR-

Press **☎ A CELL** or **☎ B CELL** on the handset, or press **CELL A ☎** or **CELL B** on the telephone base to dial with the cell line.

Erase missed calls indicator in the call log

Using a cordless handset or the telephone base:

When you have incoming calls that have not been answered, the handset screen displays **XX missed calls**, and the telephone base screen displays . When you have reviewed all the missed calls, the missed call indicator is erased.

If you want to erase the missed call indicator without reviewing the caller ID log, press and hold **OFF/CANCEL** on a handset, or **CANCEL** on the telephone base.

Answering system

About answering system and voicemail

Your telephone has separate indicators for two different types of voice messages: those left on the built-in answering system and those left at your telephone service provider's voicemail. To listen to messages recorded on the built-in answering system, refer to the **Message playback** section; to listen to voicemail, contact your telephone service provider for more information.

	Built-in answering system 	Voicemail service 
Supported by	Telephone system	Telephone service provider
Subscription	No	Yes
Fees	No	May apply
Answer incoming calls	<ul style="list-style-type: none"> ▶ After 4 rings by default. ▶ It can be changed in the handset or the telephone base menu. 	<ul style="list-style-type: none"> ▶ Usually after 2 rings. ▶ It can be changed by contacting your telephone service provider.
Storage	Telephone base	Server or System
Display new messages	▶ Handset and telephone base - XX New msgs	▶ Handset and telephone base -  and Voicemail
Retrieve messages	<ul style="list-style-type: none"> ▶ Press  on the telephone base; OR ▶ Press MENU, and then select Play messages on the handset; OR ▶ Access remotely with an access code. 	<ul style="list-style-type: none"> ▶ Press  on the dialpad, and enter an access number from your telephone service provider.

Answering system

Turn answering system on or off

The answering system must be turned on to answer and record messages.

Using the telephone base:

- Press **⏻/LINE 1 ANS ON/OFF** or **⏻/LINE 2 ANS ON/OFF** to turn the corresponding answering system on or off. If the answering system is turned on, it announces, "Calls will be answered." If the answering system is turned off, it announces, "Calls will not be answered."

-OR-

- When the telephone base is in idle mode, press **MENU** to enter the main menu.
- Press **SELECT** to select **Answering system**.
- Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to highlight **Mailbox 1** or **Mailbox 2**, and then press **SELECT**.
- Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to highlight **Answer ON/OFF**, and then press **SELECT**.
- Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to highlight **On** or **Off**, and then press **SELECT** to save the setting. You hear a confirmation tone.

Message alert tone

When this feature is on, and there is at least one new message, the telephone base beeps every 10 seconds.

Using the telephone base:

- When the telephone base is in idle mode, press **MENU** to enter the main menu.
- Press **SELECT** to select **Answering system**.
- Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to highlight **Mailbox 1** or **Mailbox 2**, and then press **SELECT**.
- Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to highlight **Ans system setup**, and then press **SELECT**.
- Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to highlight **Msg alert tone**, and then press **SELECT**.
- Press **▼CID, ▲DIR, ▼/RECORD**, or **▲/DELETE** to choose **On** or **Off**.
- Press **SELECT** to save the setting. You hear a confirmation tone.

Answering system

Call screening

Use this feature to choose whether incoming messages can be heard over the speaker when they are being recorded. If you turn call screening on, you hear the incoming message. While monitoring an incoming message, you can answer the call by pressing **LINE 1/FLASH**, **LINE 2/FLASH**, or **⏪/SPEAKER** on a cordless handset, or pressing **1 LINE**, **2 LINE**, or **SPEAKER ⏪** on the telephone base. You can also lift the corded handset to answer the incoming call.

Using the telephone base:

1. When the telephone base is in idle mode, press **MENU** to enter the main menu.
2. Press **SELECT** to select **Answering system**.
3. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Mailbox 1** or **Mailbox 2**, and then press **SELECT**.
4. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to highlight **Ans system setup**, and then press **SELECT**.
5. Press **SELECT** to select **Call screening**.
6. Press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to choose **On** or **Off**.
7. Press **SELECT** to save the setting. You hear a confirmation tone.

Answering system

Message playback

Using the telephone base:

- ▶ Press **▶/■/LINE 1 MAIL BOX** or **▶/■/LINE 2 MAIL BOX** on the telephone base to listen to the messages.
 - ▶ If there are new and old messages, press **▼CID**, **▲DIR**, **▼/RECORD**, or **▲/DELETE** to select **Play new msgs** or **Play old msgs**, and then press **SELECT**.

Using a cordless handset:

1. When the handset is in idle mode, press **MENU** to enter the main menu.
2. Press **SELECT** to select **Play messages**.
3. Press **▼/▲** to highlight **Mailbox 1** or **Mailbox 2** -> **SELECT**.
 - ▶ If there are new and old messages, press **▼/▲** to select **Play new msgs** or **Play old msgs** -> **SELECT**.

Options during playback

Feature	On the telephone base	On a handset
Adjust playback to volume	Press ▼ VOLUME ▲	Press ▼ CID/VOLUME or ▲ DIR/VOLUME
Stop playback	Press ▶/■/LINE 1 MAIL BOX , ▶/■/LINE 2 MAIL BOX , or CANCEL	Press OFF/CANCEL
Skip to the next message	Press ▶/SKIP or SKIP	Press SKIP
Repeat the message	Press ◀/REPEAT or REPEAT	Press REPEAT
Play the previous message	Press ◀/REPEAT or REPEAT twice	Press REPEAT twice
Delete the message	Press ▲/DELETE	Press MUTE/DELETE

For C-UL compliance

In compliance with the bilingual requirements for safety, caution, and warning markings of Canadian Federal and Provincial/Territorial statutes and regulations, the French version of Important safety information is included.

Mesures de sécurité importantes



Ce symbole vous alertera d'informations importantes ou d'instructions d'entretien pouvant apparaître dans ce guide d'utilisation. Respectez toujours les mesures de sécurité et de sécurité de base lorsque vous utilisez ce produit, afin de réduire les risques de blessures, d'incendie, ou d'électrocution.

Information relative à la sécurité

- ▶ Veuillez lire et comprendre toutes les instructions de ce guide d'utilisation. Relectez toutes les inscriptions apparaissant sur le produit.
- ▶ Évitez d'utiliser le téléphone pendant un orage. Il pourrait y avoir un faible risque d'électrocution.
- ▶ N'utilisez pas un téléphone près d'une fuite de gaz. Dans certaines circonstances, une flammèche pourrait se produire lorsque l'adaptateur est branché à une prise de courant, ou lorsque le combiné est déposé sur son chargeur. Ceci est un événement fréquent associé avec la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher un téléphone dans une prise de courant, et ne devrait pas déposer un combiné chargé dans le chargeur, si le téléphone se trouve dans un environnement comportant une concentration de gaz inflammables ou ignifuges, à moins de se trouver dans un endroit où la ventilation est adéquate. Une flammèche dans de tels environnements pourrait provoquer une explosion. De tels environnements peuvent comprendre : les endroits où de l'oxygène à des fins médicales est utilisé sans ventilation adéquate; des endroits où se trouvent des gaz industriels (dissolvants de nettoyage, des vapeurs de gazoline, etc.), une fuite de gaz naturel, etc.
- ▶ N'utilisez pas ce produit près de l'eau ou lorsque vous êtes mouillés. Par exemple, ne l'utilisez pas dans des sous-sols humides ou sous la douche, ou près d'une piscine, d'un bain, d'un évier de cuisine, ou d'une cuve de lavage. N'utilisez pas de liquides, ou de vaporisateurs aérosol de nettoyage. Si le produit entre en contact avec du liquide, débranchez immédiatement le fil téléphonique ou le cordon d'alimentation. Ne rebranchez pas le produit avant qu'il soit complètement sec.
- ▶ Installez cet appareil dans un endroit protégé où personne ne peut trébucher sur les cordons d'alimentation ou la ligne téléphonique. Protégez les câbles contre les dommages ou l'abrasion.

For C-UL compliance

- ▶ Si le produit ne fonctionne pas correctement, consultez la section **Dépannage (Troubleshooting)** du guide d'utilisation. Si vous ne pouvez pas régler le problème, ou si le produit est endommagé, consultez la section **Garantie limitée (Limited warranty)** des pages 36-38. N'ouvrez pas ce produit, sauf tel qu'indiqué dans le guide d'utilisation. L'ouverture du produit ou le remontage inadéquat pourrait vous exposer à des tensions dangereuses ou autres dangers.
- ▶ Remplacez les piles uniquement tel que décrit dans votre guide d'utilisation (Page 6). N'incinerez pas et ne percez pas les piles — elles contiennent des produits chimiques caustiques.
- ▶ L'adaptateur de courant est conçu pour être orienté verticalement ou installé sur le plancher. Les broches ne sont pas conçues pour se maintenir en place si la fiche est branchée dans une prise de courant au plafond, sous la table ou sous une armoire.
- ▶ Pour les produits à brancher à une prise de courant, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant.



MISES EN GARDE:

- ▶ N'utilisez seulement l'adaptateur inclus avec ce produit. Pour obtenir une pièce de rechange, visitez notre site Web au

<https://telephones.att.com> ou composez le
1-800-222-3111. Au Canada, composez le **1-866-288-4268**.

- ▶ N'utilisez que la pile de rechargeable incluse ou une pile de rechange (modèle BT183342/BT283342). Pour commander, visitez notre site Web

<https://telephones.att.com> ou composez le
1-800-222-3111. Au Canada, composez le **1-866-288-4268**.



ATTENTION: Afin de prévenir les risques d'incendie ou d'explosion de la pile, remplacez la pile avec une pile du même type. Jetez les piles épuisées en respectant les instructions.

For C-UL compliance

Spécifiquement en rapport avec les téléphones sans fil

- ▶ Confidentialité : Les mêmes caractéristiques qui rendent les téléphones sans fil si pratiques créent également des restrictions. Les appels téléphoniques sont transmis entre le socle du téléphone et le combiné par le biais d'ondes radio, et il se peut que vos conversations téléphoniques soient interceptées par d'autres équipements de réception d'ondes radio au sein de la portée du téléphone sans fil. Pour cette raison, vous ne devez pas considérer les conversations sur un téléphone sans fil comme étant aussi confidentielles que celles d'un téléphone à cordon.
- ▶ Alimentation électrique : La base de ce téléphone sans fil doit être branchée à une prise de courant électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteur mural. Les appels ne peuvent pas être effectués à partir du combiné si la base n'est pas branchée, si elle est hors fonction ou si le courant électrique est coupé.
- ▶ Interférences potentielles aux téléviseurs : Certains téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et magnétoscopes. Pour réduire ou prévenir de tels parasites, ne pas déposer la base du téléphone sans fil à proximité d'un téléviseur ou magnétoscope, ni directement sur celui-ci. Si votre téléviseur affiche des interférences, éloignez le téléphone sans fil de celui-ci afin de réduire les parasites.
- ▶ Piles rechargeables : Ce produit comporte des piles rechargeables à l'hydrure métallique de nickel. Utilisez de prudence lorsque vous manipulez de telles piles et veillez à ne pas les court-circuiter avec des matériaux conducteurs, tels que des bagues, bracelets et clés. La pile ou le conducteur peut surchauffer et vous brûler. Respectez la polarité adéquate entre les piles et le chargeur de piles.
- ▶ Piles rechargeables à l'hydrure métallique de nickel : Jetez ces piles de manière sécuritaire. N'incinerez pas et ne percez pas les piles. Comme pour les autres piles du même type, si elles sont brûlées ou percées, des matières corrosives peuvent s'en échapper, ce qui risque de causer des brûlures ou autres blessures corporelles.



Le sceau de l'organisme de recyclage RBRC sur les piles à l'hydrure métallique de nickel signifie que le fabricant de cet appareil participe volontairement au programme industriel visant à reprendre et recycler ce type de piles lorsqu'elles ne servent plus, au sein du territoire des États-Unis et du Canada. Vous devez apporter ces piles chez un détaillant participant ou le centre de recyclage le plus près de chez vous. Ou vous pouvez composer le 1-800-8-BATTERY^{MD} afin de connaître les endroits qui acceptent les piles à l'hydrure métallique de nickel mortes.

RBRC Seal et 1-800-8-BATTERY^{MD} sont des marques déposées de Call2recycle, Inc.

For C-UL compliance

Mesures préventives pour les utilisateurs de stimulateurs cardiaques implantés dans l'organisme

Stimulateurs cardiaques (ne s'applique qu'aux téléphones sans fil numériques) :

L'organisme "Wireless Technology Research, LLC (WTR)", une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-unis, la firme WTR recommande aux médecins :

Avis aux détenteurs de stimulateurs cardiaques:

- ▶ Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.
- ▶ Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci est en fonction.
- ▶ Ils doivent utiliser le téléphone sans fil en l'appuyant sur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causé par les gens qui utilisent un téléphone sans fil à proximité de ceux-ci.

Mode ECO

Lorsque le socle communique avec le combiné, le mode ECO sera activé automatiquement. Ceci réduit la consommation d'énergie selon la distance entre le socle du téléphone et le combiné.

Spécifiquement en rapport avec les répondeurs téléphoniques

Enregistrement deux voies : Cet appareil n'émet pas de bips d'avertissement qui permettent de prévenir l'autre partie que vous enregistrez la conversation. Pour assurer votre conformité aux règlements fédéraux ou provinciaux en rapport avec les enregistrements des conversations téléphoniques, vous devriez informer l'autre partie lorsque vous activez l'enregistrement.

CONSERVEZ CES INSTRUCTIONS

FCC Part 68 and ACTA

This equipment complies with Part 68 of the FCC rules and with technical requirements adopted by the Administrative Council for Terminal Attachments (ACTA). The label on the back or bottom of this equipment contains, among other things, a product identifier in the format US:AAAEQ##TXXXX. This identifier must be provided to your telephone service provider upon request.

The plug and jack used to connect this equipment to premises wiring and the telephone network must comply with the applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines. See the installation instructions in the user's manual.

The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas, the sum of all RENs should be five (5.0) or less. For more information, please contact your telephone service provider.

This equipment must not be used with Party Lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, consult your telephone service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the Limited warranty.

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned.

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency numbers, please:

- ▶ Remain on the line and briefly explain the reason for the call before hanging up.
- ▶ Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Privacy of communications may not be ensured when using this telephone.

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met.

The Ringer Equivalence Number (REN) for this terminal equipment is 1.0. The REN indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five.

This product meets the applicable Innovation, Science and Economic Development Canada technical specifications.

FCC Part 15

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of approximately 20 cm (8 inches) or more.

This Class B digital apparatus complies with Canadian requirement:
CAN ICES-3 (B)/NMB-3(B)

Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to our website at

<https://telephones.att.com> or call **1 (800) 222-3111**. In

Canada, dial **1 (866) 288-4268**.

1. What does this limited warranty cover?

The manufacturer of this AT&T branded product warrants to the holder of a valid proof of purchase ("CONSUMER" or "you") that the product and all accessories provided in the sales package ("PRODUCT") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period ("materially defective PRODUCT")?

During the limited warranty period, the manufacturer's authorized service representative will repair or replace at the manufacturer's option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer will retain defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer's option, is your exclusive remedy. The manufacturer will return repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or (b) the time remaining on the original one-year limited warranty; whichever is longer.

4. What is not covered by this limited warranty?

This limited warranty does not cover:

- ▶ PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- ▶ PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- ▶ PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- ▶ PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- ▶ PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- ▶ PRODUCT purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to products used for rental purposes); or
- ▶ PRODUCT returned without valid proof of purchase (see item 6); or
- ▶ Charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the unit.

5. How do you get warranty service?

To obtain warranty service, visit <https://telephones.att.com> or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Note: Before calling for service, please review the user's manual; a check of the PRODUCT's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location. The manufacturer will return repaired or replaced PRODUCT under this limited warranty to you. Transportation, delivery or handling charges are prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer

will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

6. What must you return with the PRODUCT to get warranty service?

You must:

- a. Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and
- b. Include “valid proof of purchase” (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
- c. Provide your name, complete and correct mailing address, and telephone number.

7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer’s responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the limitation mentioned above may not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion mentioned above may not apply to you.

Please retain your original sales receipt as proof of purchase.

Technical specifications

RF frequency band	DECT frequency: 1921.536 - 1928.448 MHz Bluetooth frequency: 2402.000 - 2480.000 MHz
Channels	DECT channel: 5 Bluetooth channel: 79
Handset battery	2.4VDC 400mAh, AAAx2, Ni-MH battery pack
Telephone base voltage (AC adapter output)	6VDC @ 600mA 5.1VDC @1000mA
Charger voltage (AC adapter output)	6VAC @300mA
USB port output current (Type A)	500mA per port
Operating times*	Talk time (cordless handset): up to 7 hours Standby: up to 7 days

* Operating times vary depending on your actual use and the age of the battery.

Company: Advanced American Telephones

Address: 9020 SW Washington Square Road - Ste 555 Tigard, OR 97223, United States.

Phone: 1 (800) 222-3111 in the U.S. or 1 (866) 288-4268 in Canada



Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

The *Bluetooth*® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

©2013-2020 Advanced American Telephones. All Rights Reserved.

AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219.

Android® is a registered trademark of Google Inc.

Connect to Cell™ is a trademark of Advanced American Telephones.

The RBRC Seal and 1-800-8-BATTERY® are registered trademarks of Call2recycle, Inc.

Printed in China. Issue 10.0 AT&T 12/20.