



at&t



Proud Sponsor

Quick start guide

CL2939

**Big button big display
telephone/speakerphone
with caller ID/call waiting**



This quick start guide provides basic instructions. For additional installation options and complete instructions that enable you to use all features of this telephone, refer to your AT&T CL2939 big button big display telephone user's manual.

For customer service or product information, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.



Battery installation (purchased separately)

Before using the telephone, you should install four good AA alkaline batteries (not included) to provide memory backup and enable the use of some features. The four AA batteries are required for the following features to work: speakerphone, mute, flash, caller ID features, display, menu, directory, redial, clock, audio assist and the **IN USE** light.



If you unplug the telephone from the wall jack, or your telephone service is interrupted, and good batteries are not installed, the following information is lost: call history, numbers stored the directory, redial, and all settings in the feature menu. We recommend that you initially install new batteries and change the batteries soon after the low battery icon  appears.

! CAUTION: Always unplug the telephone line cord before installing new batteries.

1. Grasp and squeeze as the arrows indicate to open the hinged bracket.
2. Press the battery compartment tabs as shown below. Lift to open the battery compartment cover.

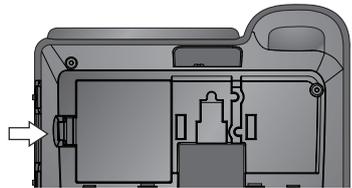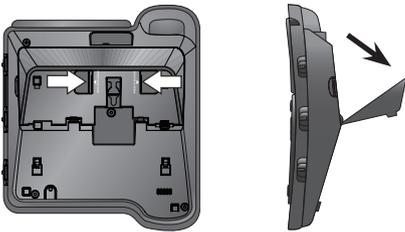


3. Follow the polarity guide markings in the battery compartment to insert four new alkaline AA batteries (purchased separately).
4. Replace the battery compartment cover. Make sure the cover snaps into place.

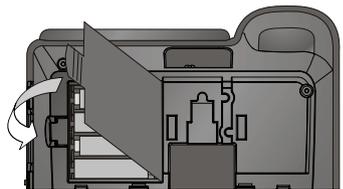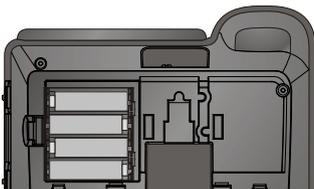

Battery installation (purchased separately)

5. Rotate the bracket and lock it back as shown below.

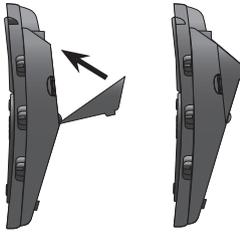

If no batteries are installed or the batteries fail, you can make or answer calls using only the handset. Redial information is held only briefly.

NOTES:


- Use disposable alkaline AA batteries only. Do not use rechargeable batteries.
- If you do not use the telephone for a long time, disconnect and remove the batteries from the telephone to prevent possible leakage.
- Always unplug the telephone line cord before installing new batteries.
- After you replace the batteries with new ones, the clock in the telephone resets. Manually set the clock again.
- If there are no batteries installed and the telephone is plugged into a telephone wall jack, when you lift the handset the screen display works using the power from the telephone line. For more details about the line power, contact your telephone service provider.

Telephone installation


If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Follow the steps below to install the telephone.


1. Plug one end of the coiled handset cord into the handset jack on the left side of the telephone base. Plug the other end into the handset and hang up.

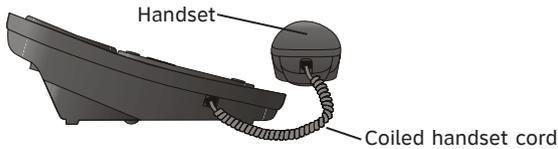

2. Plug one end of the telephone line cord into the **TEL LINE** jack on the back of the telephone base. Plug the other end of the telephone line cord into a telephone wall jack.

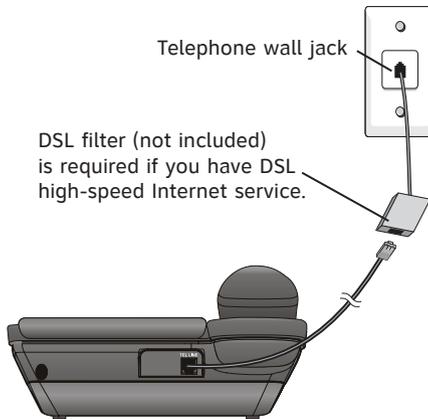

3. Lift the handset or press **SPEAKER** to check for a dial tone.
4. Rotate the top of the display up or down to adjust the angle of the screen for maximum visibility.

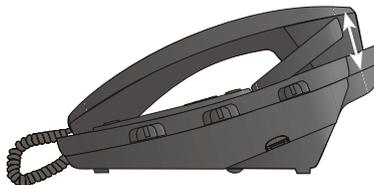

Quick reference guide

REMOVE

When the telephone is idle, **press and hold** to clear the call history.

While reviewing an entry stored in the speed dial memory location, directory or call history, **press** to delete.

While entering numbers or names, **press** to cancel and return to idle mode.

DISPLAY DIAL

Press to dial the number currently displayed.

MEM

Press to access the speed dial memory.

FLASH

During a call, **press** to answer an incoming call if you subscribe to call waiting service provided by your telephone service provider.

Press to cancel an operation and return to idle mode.

REDIAL

While using the handset or speakerphone, **press** to dial the last number dialed.

While editing numbers in the speed dial memory or directory, **press** to copy the last number dialed.



CID/▼

Press to display the call history.

While using the menu, **press** to scroll through the settings.

While reviewing the directory or call history, **press** to scroll down.

While entering names, **press** to insert a space.

While entering numbers, **press** to insert a space (represented by a dash); **press** twice to insert a three-second dialing pause.

DIR/▲

Press to enter the directory.

While using the menu, **press** to scroll through the settings.

While reviewing the directory or call history, **press** to scroll up.

While entering names (or numbers), **press** to backspace and erase a character (or digit).

SELECT

While using the menu, **press** to save the setting and move to the next menu option.

While reviewing the call history, **press** to show dialing formats.

Quick reference guide

MENU

Press to enter the menu.

While reviewing the call history, press to store the displayed name and number in the directory.

While reviewing the directory, press to edit the displayed entry.

AUDIO ASSIST™

Some voices will sound louder and clearer if you press **AUDIO ASSIST** while you are on a call using the handset.

MUTE

During a call, press to mute the handset or speakerphone microphone. Press again to resume your conversation.

SPEAKER

Press to turn the base speakerphone on or off.

RINGER VOL switch

Slide to adjust the ringer volume.

VOL switch

Slide to adjust the listening volume on the handset.

VOL switch

Slide to adjust the listening volume on the speakerphone.



IN USE light

On when the line is in use.

Flashes quickly when there is an incoming call.

Flashes slowly when another telephone on the same line is in use or no telephone line cord is connected to this telephone.

AUDIO ASSIST light

On when the audio assistance feature is in use.

MUTE light

On when the microphone is muted.

SPEAKER light


On when the speakerphone is in use.

Screen messages and icons

Display screen messages

CALL LOG EMPTY	There are no call history entries.
DELETED	All the entries stored in the call history have been deleted. -OR- The last number dialed is deleted.
DIRECTORY EMPTY	There are no telephone numbers stored in the directory.
END OF LIST	You have reached the end of the call history records.
LINE IN USE	Another telephone on the same line is in use. -OR- No telephone line cord is connected to the telephone.
LINE RINGING	There is an incoming call.
MEMORY FULL	The directory is full.
NO NAME FOUND	There are no entries in the directory matching the key pressed.
NO NUMBER	There is no telephone number in the call history entry you dialed or saved in the directory. -OR- The speed dial memory location or redial memory you accessed is empty.
ONLY 15 ALLOWED	The name you entered in the directory is over 15 characters.
ONLY 24 ALLOWED	The number you entered in the directory or speed dial memory is over 24 digits.
STORED	The entry is saved in the directory or speed dial memory location successfully.
XX CALLS YY NEW	There are XX calls in the call history and YY of them are new and have not been reviewed.

Screen icons

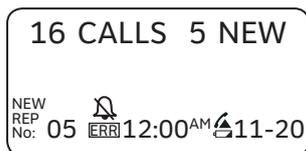

NEW	The displayed call history entry has not been reviewed.
REP	You have received more than one call from this number.
No: 05	The position of the number stored in the call history.
	The ringer is turned off.
	There is an error in the caller ID information.
	On when the line is in use. -OR- Flashes when there is an incoming call.
	The power of the installed batteries is low.

Making and answering a call

Using handset

To make a call:


1. Lift the handset then wait for a dial tone.
2. Use the dial pad keys to dial a number.

To answer a call:

- Lift the handset.

To end a call while using the handset:

- Place the handset in the telephone base.

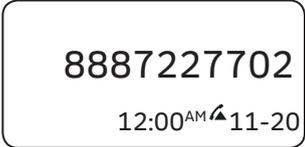

Using speakerphone

To make a call:

1. Press **SPEAKER** then wait for a dial tone.
2. Use the dial pad keys to dial a number.

To answer a call:

- Press **SPEAKER**.

To end a call while using the speakerphone:

- Press **SPEAKER**.



Switching between handset and speakerphone

To switch from handset to speakerphone during a call:

- Press **SPEAKER** then place the handset in the telephone base.

To switch from speakerphone to handset during a call:




- Lift the handset.

Speed dial memory storage

Speed dial memory storage

This telephone has 10 speed dial memory locations where you can store telephone numbers you wish to dial using fewer keys than usual. Use the following steps to store a telephone number in a desired speed dial memory location.

1. When the telephone is idle, press **MEM**.
 2. Press **DIR/▲** or **CID/▼** until **STORE** is blinking.
 3. Press **SELECT**, the screen shows **ENTER NUMBER**.
 4. Use the dial pad keys to enter the telephone number (up to 24 digits).
 - To backspace and erase a digit, press **DIR/▲**.
 - To insert a space between digits, press **CID/▼**. A dash appears on the screen.
 - To insert a three-second dialing pause, press **CID/▼** twice. A **P** appears on the screen.
 - To insert a flash signal for using the service supplied by your telephone service provider, press **FLASH**. An **F** appears on the screen.
 - To copy the last number dialed (up to 24 digits), press **REDIAL**.
 5. Press **SELECT**. The screen shows **ENTER LOCATION?**
 6. Press a dial pad key (**0** through **9**) to choose the desired speed dial memory location for the new entry. The screen shows **STORED** and then **ENTER NUMBER**.
 7. Repeat steps 4 through 6 above to store a number in another speed dial memory location.
- OR-**
Press **REMOVE** to return to idle mode.

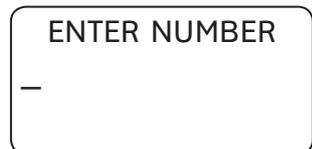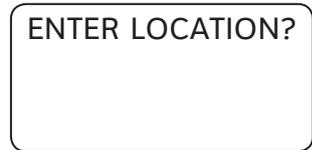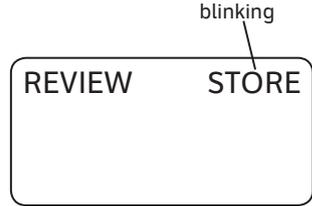

i **NOTE:** If you try to enter a telephone number with more than 24 digits, the screen shows **ONLY 24 ALLOWED**.



Proud Sponsor

www.telephones.att.com

Audio assist™ is a trademark of Advanced American Telephones.

© 2009-2010 Advanced American Telephones. All Rights Reserved.
AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to
Advanced American Telephones, San Antonio, TX 78219.

Printed in China. Issue 6 AT&T 06/10.