




at&t

User's manual

TR1909

Trimline® telephone
with caller ID/call waiting

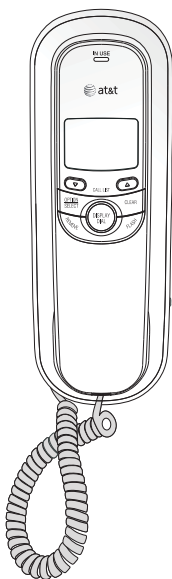

Congratulations

on purchasing your new AT&T product. Before using this AT&T product, please read the **Important safety information** on page 32 of this manual. Please thoroughly read the user's manual for all the feature operations and troubleshooting information necessary to install and operate your new AT&T product. You can also visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**.

In Canada, dial **1 (866) 288-4268**.

Model number: TR1909

Product name: Trimline® telephone with caller ID/call waiting

Serial number: _____
(found on the bottom of the telephone base)

Purchase date: _____

Place of purchase: _____


Trimline® is a registered trademark of Advanced American Telephones.

© 2009-2012 Advanced American Telephones. All Rights Reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Advanced American Telephones, San Antonio, TX 78219.

Parts checklist

Save your sales receipt and original packaging in the event warranty service is necessary.


Your package contains the following items:

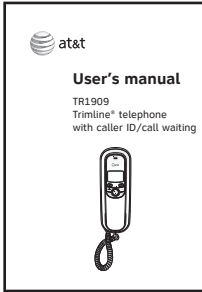


Quick start guide



Handset

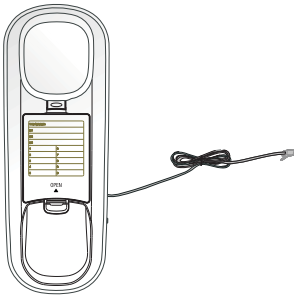

Telephone base with
telephone line cord
and mounting bracket

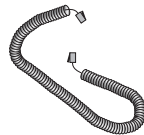

Coiled handset cord

User's manual

TR1909

Trimline® telephone with
caller ID/call waiting



Table of contents

Getting started

Product overview	1
Handset layout	2
Screen display messages	4
Installation preparation	5
Battery installation	6
Telephone installation	8
Wall installation	9
Switching from wall installation to desktop	11

Telephone settings

About the feature menu	12
Feature summary	13
Menu setup	14

Telephone operation

Basic telephone operation	18
Options while on calls	19

Telephone memory

Memory operation (one-touch)	20
---------------------------------------	----

Memory operation (speed dial)	22
--	----

Caller ID operation

Caller ID overview	23
Reviewing the call log	25
Deleting call log entries	26
Copying a call log entry into memory	27

Appendix

Troubleshooting	28
General product care	31
Technical specifications	31
Important safety information	32
FCC and ACTA information	33
FCC Part 15	34
Limited warranty	35
Index	38

Product overview

This AT&T TR1909 Trimline® telephone with caller ID/call waiting can be used either in desktop or wall mount position, and requires four AA alkaline batteries (not included) for all functions. The telephone can still operate with limited features when there are no batteries installed.

The TR1909 telephone features a 13-number memory for fast dialing and has a call log which can store up to 80 additional numbers with names. It also has a caller ID feature which supports caller ID with call waiting service. (Caller ID services are subscriber services available from your telephone service providers for a fee.)

This user's manual contains detailed instructions for installing and operating your AT&T TR1909 Trimline® telephone with caller ID/call waiting. Please follow the instructions carefully.

Handset layout

IN USE light


Flashes quickly when there is an incoming call.
Flashes slowly when the telephone line cord is not plugged into a wall jack or another telephone on the same line is in use.
On when the telephone is in use.

OPTION/SELECT

Press to display the setting options.
While in the option menu, press to save the selection and move to the next feature (page 12).
While reviewing the call log, press repeatedly to show different dialing formats (page 26).

REMOVE

While reviewing the call log, press to delete the entry currently displayed, or press and hold to remove all entries (pages 26 and 27).

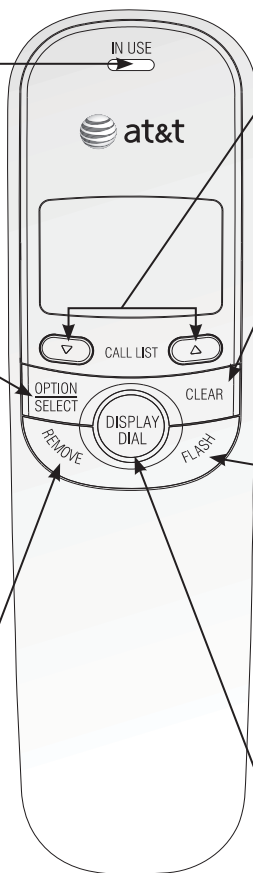

CALL LIST ▼/▲

When the telephone is idle, press to display caller ID information (page 25).

CLEAR

Press to exit storing a number in memory, to exit the call log, or to return to the idle screen anytime without saving the changes.

FLASH

When there is a call waiting signal, press **FLASH** to put the current call on hold and connect to the new call. Press **FLASH** again to return to the original call.

Press **FLASH** to activate other telephone company subscriber services such as three-way calling (page 19).

DISPLAY DIAL

Press to dial the number currently displayed (page 26).

Handset layout

M1, M2, M3

When the handset is lifted, press to dial a number from the one-touch memory (page 21).

Listening volume

Slide to adjust the handset listening volume to **LO**, **MED** or **HI** (page 18).

MEMORY

Press to access telephone numbers stored in the speed dial memory (page 22).

MUTE

Press and hold **MUTE** to silence the microphone to prevent the other party from hearing you; you are still able to hear the other party. Release **MUTE** to return to the conversation (page 19).

Switch hook

When held down, the telephone is in idle mode.

When released, the telephone is ready to make a call.

Dialing keys

Press to dial a number.


PAUSE/REDIAL

When the handset is lifted, press to redial the last number dialed (page 18).

When storing a number in the memory, press to insert a three-second pause in the dialing sequence (pages 20 and 22).


PROG

Press to store a telephone number in the memory (pages 20 and 22).

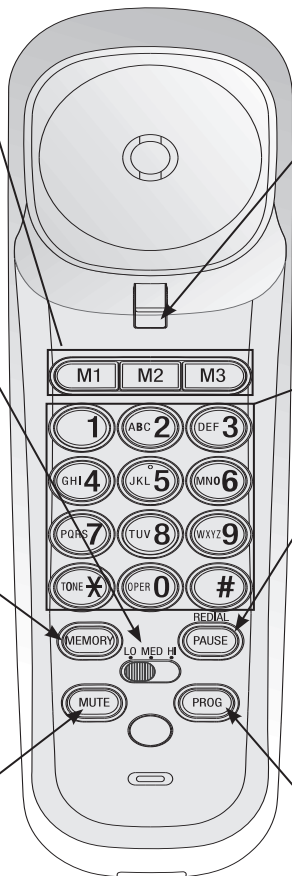

Screen display messages

Screen icons

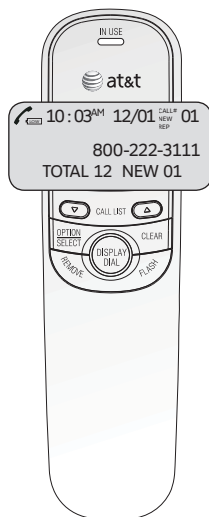

- The telephone line cord is not plugged into the wall jack.
- The telephone or another telephone on the same line is in use.



The battery power is low.

CALL# Call number in the call log.

NEW The call is new and has not been reviewed.

REP Repeat call from the same number.

Screen display messages

REMOVE ALL? Remove all call log entries.

-END OF LIST- You have reached the end of the call log entries.

Pro Program a one-touch or speed dial memory.

LIFT RECEIVER A caller ID entry is ready to be dialed by lifting the handset.

TOTAL XX NEW YY There are XX calls in the call log. YY of them are new and have not been reviewed.

Installation preparation

Make sure to install four AA alkaline batteries (not included) before using the telephone.



See page 6 for easy instructions.

If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your telephone lines, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Your product may be shipped with a protective sticker covering the handset or telephone base display - remove it before use.

For customer service or product information, visit our website at

www.telephones.att.com or call **1 (800) 222-3111**.

In Canada, dial **1 (866) 288-4268**.



CAUTION: To reduce the risk of fire or injury to persons or damage to the telephone, read and follow these instructions carefully:

1. Use only four AA alkaline batteries (not included).
2. Dispose of these batteries in a safe manner. Do not burn or puncture. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.
3. Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to create a short circuit. Do not allow conductive materials such as rings, bracelets or keys to touch the battery. The battery or conductor may overheat and cause harm.
5. Use the battery identified for use with this product only in accordance with the instructions and limitations specified in this manual.
6. Observe proper polarity orientation between the battery and metallic contacts.
7. Do not disassemble your telephone. There are no serviceable parts inside. Refer to qualified service personnel for servicing.

Battery installation

Before using the telephone, install four good AA alkaline batteries (not included) to provide memory backup, and to enable features such as caller ID and the **IN USE** light. If good batteries are not installed, the display only works when you lift the handset. When operating in this mode, the display may be dimmer than usual.


If you unplug the telephone from the telephone wall jack, or you lose telephone service for a few minutes, and good batteries are not installed, the following information is lost: call list, numbers stored in one-touch and speed dial memory, last number redial, and all settings in the feature menu. It is recommended that you install new batteries soon after the low battery icon appears.

Follow the steps below to install batteries:

1. Press on the tab and lift to open the cover of the battery compartment.




Press this tab to release.

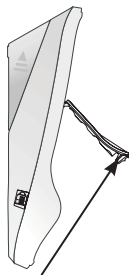

Lift this tab to open.

2. Install four new AA batteries (not included) in the battery compartment according to the engraved labels, + and -, in the compartment. Place the batteries above the battery strap.

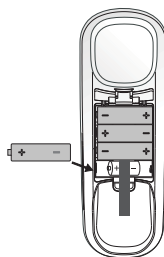

3. Close the battery compartment cover. Make sure it clicks into place.

Battery installation

NOTES:


- Do not mix old and new batteries, and do not mix alkaline and standard (carbon-zinc) batteries.
- When the batteries are installed, the screen shows 12:00 and the clock begins to run. The clock will be set automatically with each incoming call if you subscribe to caller ID service provided by your telephone service provider. If you wish to set the date and time manually, see **Time and date** on page 16.
- Always disconnect the telephone line from the telephone wall jack before replacing batteries.
- Install new batteries every six months to maintain the call log and telephone memory.

Telephone installation

If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your telephone lines, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Install the telephone as shown below:

1. Plug one end of the coiled handset cord into the handset jack on the left side of the telephone base. Plug the other end into the handset.
2. One end of the telephone line cord has been installed into the telephone jack at the bottom of the telephone base. Route the telephone line cord through the slot as shown.
3. Plug the other end of the cord into a telephone wall jack.
4. Put the handset on the telephone base.

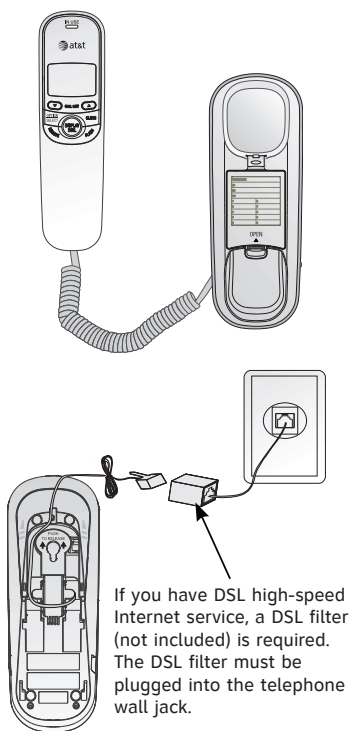


Wall installation


Your telephone base is ready for desktop use. If you want to mount your telephone on a wall, use the provided mounting bracket to connect with a standard dual-stud telephone wall mounting plate. If you do not have this mounting plate, you can purchase one from many hardware or consumer electronic retailers. You may need professional assistance to install the mounting plate.

To install the telephone base in the wall mount position, make sure that you first unplug the telephone line cord from the telephone wall jack and remove it from the slot under the telephone base.

1. Lift the handset and place it aside. On the telephone base, pull out the handset tab and rotate it 180 degrees. Replace the handset tab into the groove until it clicks into position.

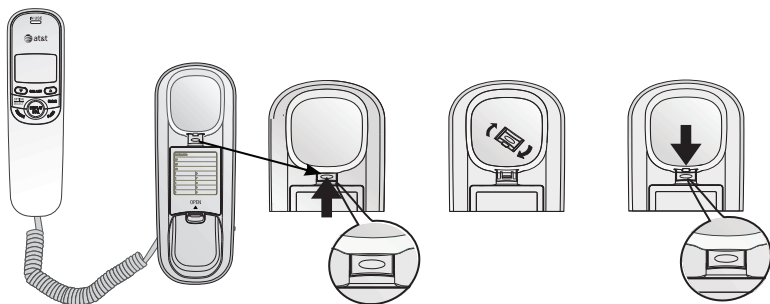


2. Remove the mounting bracket from the base. Hold the telephone base with both hands and then slide the bracket upwards as the arrows indicate.




Wall installation

3. Rotate the bracket 180 degrees to the wall mounting position. Push the bracket upwards as shown until it clicks into place.

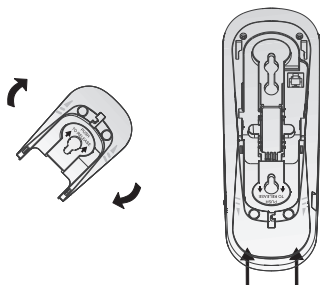


4. Route the telephone line cord through the slot as shown and plug the other end of the cord into a telephone wall jack. To mount the telephone on the wall, position the mounting holes A and B over the telephone outlet mounting studs. Slide the bracket down firmly so the telephone is held securely on the studs.

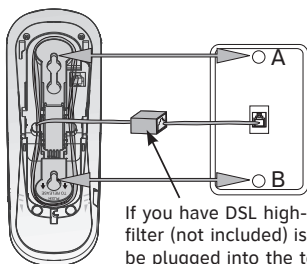

If you have DSL high-speed Internet service, a DSL filter (not included) is required. The DSL filter must be plugged into the telephone wall jack.


5. Place the handset back on the telephone base.





Switching from wall installation to desktop

To return the bracket from wall mount position to desktop use, follow the instructions below:

1. Remove the telephone base from the mounting plate. Unplug the telephone line cord from the telephone wall jack and remove the cord from the slots under the telephone base.
2. Lift the handset and place it aside. On the telephone base, pull out the handset tab and rotate it 180 degrees. Replace the handset tab back to the groove until it clicks into position.

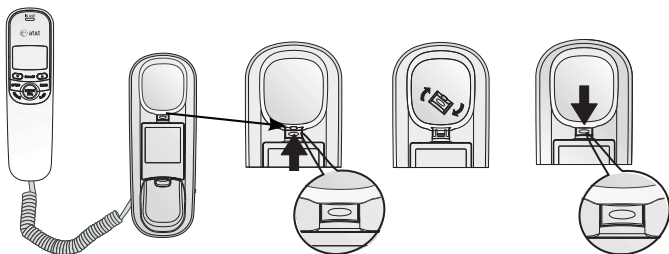

3. Remove the bracket from the base. Hold the telephone base firmly and then slide the bracket downwards as the arrows indicate.
4. Rotate the bracket to the desktop installation position. Push the bracket down as shown below until it clicks into place.

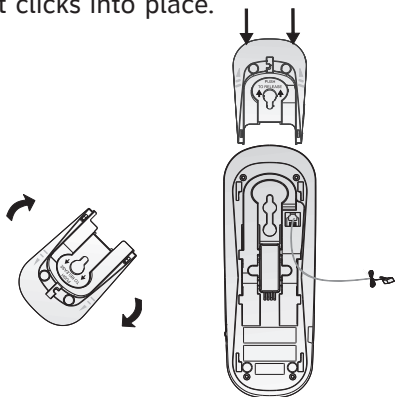

5. Follow steps 2-4 in **Telephone installation** on page 8 to install your telephone for desktop use.

About the feature menu

The table on page 13 provides a summary of the feature menu. Use the instructions below to change the setting in the menu:


1. When the telephone is idle, press **OPTION/SELECT** repeatedly until the screen displays the desired feature.
2. Press ▼ or ▲ until the screen displays the desired setting.
3. Press **OPTION/SELECT** within 10 seconds to save your selection and move to the next feature.

- OR -

Press **CLEAR** to exit without saving your selection and return to idle mode.

- OR -


Wait 10 seconds to exit without saving your selection and return to idle mode automatically.



Feature summary

Default settings are indicated by an asterisk (*).

Screen display	Function	Options
SET CONTRAST	Adjust the screen brightness to a comfortable level, from 1 (lightest) to 5 (darkest). The contrast may be different for desktop and wall mount installation.	1, 2, 3*, 4, 5
HOME AREA CODE?	Set the telephone to recognize calls from the home area code.	HAC - ___
LOCAL AREA CODE?	Program up to four area codes which may not require dialing 1 before them.	LAC 1- ___ LAC 2- ___ LAC 3- ___ LAC 4- ___
SET TIME/DATE	Set the time and date on the handset.	12:00^{AM}, 1/01
SET LANGUAGE	Choose the screen display language.	ENGLISH* FRANCAIS ESPANOL
SET TONE/PULSE	Set whether the telephone should be tone dial or pulse dial.	TONE* PULSE

 **NOTE:** The features are listed in the order they appear after the initial setup. When you first install batteries, the order is: **SET LANGUAGE, SET CONTRAST, HOME AREA CODE?, LOCAL AREA CODE?, SET TIME/DATE** and **SET TONE/PULSE**.

Menu setup

Contrast

This feature allows you to adjust the screen contrast level for different lighting conditions.

1. Press **OPTION/SELECT** repeatedly until the screen displays **SET CONTRAST**.
2. Press ▼ or ▲ to select the desired screen contrast level from 1 (lightest) to 5 (darkest).
3. Press **OPTION/SELECT** to save your selection and move to the next feature.
- **OR** -
Press **CLEAR** to exit without saving your selection and return to idle mode.

3
SET CONTRAST

Home area code

Home area code is the area code associated with your telephone number. It is necessary to program a home area code so the telephone can properly display incoming calls and dial the telephone numbers from the call log.

For calls within your area code:

If you dial:	Enter in steps 2 and 3:
7 digits (phone number, no area code)	Your area code
10 digits (area code + phone number)	000
11 digits (1 + area code + phone number)	000

1. Press **OPTION/SELECT** repeatedly until you see **HOME AREA CODE?**
2. Press ▼ or ▲ to set the first digit of the home area code. Press ▼ or ▲ to decrease or increase the number.
3. Press **DISPLAY DIAL** to move on to set the next digit.

HAC - ____
HOME AREA CODE?

Menu setup

- Repeat steps 2 and 3 for the second and third digits of your home area code.
- Press **OPTION/SELECT** to save the home area code and continue to set the local area code.

Local area codes

Local area codes are area codes associated with other telephone numbers for which you must dial the area code, but do not need to dial 1. This includes your own area code if you must dial the area code but not 1 to make calls in your own area code.

You can program up to four local area codes. Do not program area codes for which you must dial 1.

For calls outside your area code:

For:	You dial:	Enter in steps 2 and 3:
All calls outside your area code	11 digits (1 + area code + telephone number)	No local area code
Some calls outside your area code	10 digits (area code + telephone number)	Area codes that do not require 1

If you dial 10 digits (area code + phone number) for calls within your own area code, include your area code as a local area code.

- Press **OPTION/SELECT** until you see **LOCAL AREA CODE?**
- Press ▼ or ▲ to set the first digit of the local area code in **LAC 1**. Press ▼ or ▲ to decrease or increase the number.
- Press **DISPLAY DIAL** to move on to set the next digit.
- Repeat steps 2 and 3 for the second and third digits of your local area code.
- Press **OPTION/SELECT** to save your setting and move to the next local area code (**LAC 2**, **LAC 3** or **LAC 4**).

LAC 1 - 8__
LOCAL AREA CODE?

- OR -

Press **CLEAR** to exit without saving your selection and return to idle mode.

Menu setup

Time and date

This feature enables you to set the time and date to be shown when the telephone is in idle mode. If you subscribe to caller ID service (see **About caller ID** on page 23), the time and date are set automatically with each incoming call.


1. Press **OPTION/SELECT** repeatedly until the screen displays **SET TIME/DATE**.
2. When the hour is flashing, use the ▼ and ▲ keys to scroll through the list of numbers from **1** to **12** to select the right number for the hour and **AM** or **PM**. Press **DISPLAY DIAL** to move on to set the minute.
3. When the minutes are flashing, use the ▼ and ▲ keys to scroll through the list of numbers from **00** to **59** to select the right number for the minutes. Press **DISPLAY DIAL** to move on to set the month.
4. When the month is flashing, use the ▼ and ▲ keys to scroll through the list of numbers from **1** to **12** to select the right number for the month. Press **DISPLAY DIAL** to move on to set the day.
5. When the day is flashing, use the ▼ and ▲ keys to scroll through the list of numbers from **1** to **31** to select the right number for the date. Press **OPTION/SELECT** to save the setting and advance to the next feature.

- OR -

Press **DISPLAY DIAL** to return to step 2 above to make any corrections.

- OR -

Press **CLEAR** to exit without saving your selection and return to idle mode.



Menu setup

Language

This telephone comes factory set for English displays. If you wish to change the displayed language to Spanish or French, follow the steps below:

1. Press **OPTION/SELECT** repeatedly until the screen displays **SET LANGUAGE**.
2. Press **▼** or **▲** to select the desired language (**ENGLISH**, **FRANCAIS** or **ESPANOL**).
3. Press **OPTION/SELECT**. The screen displays **CONFIRM?**
4. Press **OPTION/SELECT** to confirm your setting and move to the next feature.

SET LANGUAGE

ENGLISH

CONFIRM?

- OR -

Press **CLEAR** to exit without saving your selection and return to idle mode.

Tone/pulse

This telephone comes factory set for touch-tone dialing. If you only have pulse dial (rotary) service, you need to change this setting to **PULSE**.

1. Press **OPTION/SELECT** repeatedly until the screen displays **SET TONE/PULSE**.
2. Press **▼** or **▲** to select **TONE** or **PULSE**.
3. Press **OPTION/SELECT** to save your selection and return to idle mode.

SET TONE/PULSE

TONE

- OR -

Press **CLEAR** to exit without saving your selection and return to idle mode.

i NOTE: If you have pulse dial (rotary) service, you can temporarily switch to touch-tone dialing during a call by pressing **TONE ✕** (see page 19). After hanging up or pressing **FLASH**, the telephone automatically returns to its original dial mode.

Basic telephone operation

Make and answer a call

To make a call:

1. Lift the handset and wait for a dial tone.
2. Use the dialing keys to enter the number you want to dial.
3. Place the handset on the telephone base to hang up.


To answer a call:

1. Lift the handset.
2. Place the handset on the telephone base to hang up.

Last number redial


To redial the last number you dialed out (up to 32 digits), follow the steps below:

1. Lift the handset and wait for a dial tone.
2. Press **REDIAL/PAUSE** on the handset.
3. Place the handset on the telephone base to hang up.




Adjust ringer volume

To adjust the ringer volume, slide the **RINGER** switch on the right side of the telephone base. You can set the ringer to off, low or high (**OFF**, **LO** or **HI**).



Adjust listening volume


To adjust the listening volume, lift the handset and slide the volume switch on the handset. You can set the listening volume to low, medium or high (**LO**, **MED** or **HI**).

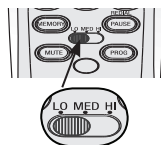

Options while on calls


Flash

If you subscribe to call waiting service from your local telephone service provider (see **About caller ID** on page 23), you hear a beep if someone calls while you are already on a call. Press **FLASH** on the handset to put your current call on hold and take the new call. You can press **FLASH** anytime to switch back and forth between calls and to activate other telephone company subscriber services such as three-way calling. Contact your telephone service provider for information on subscriber services.



Mute


You can press and hold **MUTE** to silence the microphone during a conversation. You can hear the caller, but the caller does not hear you until you release **MUTE** to resume conversation.



Temporary tone dialing

This feature can temporarily switch from pulse to touch-tone dialing during a call.

1. During a call, press **TONE** ✕.
2. Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals.
3. The telephone automatically returns to pulse dialing mode after you hang up.

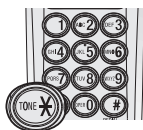

Memory operation (one-touch)


This telephone has 13 memory locations with three one-touch memory location keys (**M1**, **M2**, **M3**) and 10 speed dial memory locations (**0** through **9**). Each location can hold a number up to 32 digits.



To store a number in a one-touch memory location

Follow the steps below to store a number in a one-touch memory location:

1. Lift the handset and press **PROG**.
2. Use the dialing keys to enter the number you want to store.





Press **PAUSE/REDIAL** once to store a three-second pause in the dialing sequence, twice for a six-second pause and so on.

- OR -

Press **PAUSE/REDIAL** to store the last number dialed.

3. Press the one-touch memory location key (**M1**, **M2** or **M3**) where you want the number to be stored. The screen briefly displays **EX**, where **X** is the memory location.



iNOTES:

- When you store a new number in a one-touch memory location, the old entry is replaced and cannot be retrieved.
- If you pause for over 10 seconds when programming an entry, the procedure will time out and you will have to begin again.

Memory operation (speed dial)

To store a number in a speed dial memory location

You can store up to 10 numbers in the speed dial memory locations (0 through 9). Each location can hold a number up to 32 digits.



To store a number in a speed dial memory location:

1. Lift the handset and press **PROG**.
2. Use the dialing keys to enter the number you want to store. Press **PAUSE/REDIAL** once to add a three-second pause in the dialing sequence, twice for a six-second pause and so on.

- OR -

Press **PAUSE/REDIAL** to store the last number dialed.

3. Press **MEMORY**, then press the dialing key (0 through 9) where you want the number to be stored. The screen briefly displays **AX**, where **X** is the memory location.



NOTES:

- When you store a new number in a speed dial memory location, the old entry is replaced and cannot be retrieved.
- If you pause for over 10 seconds when programming an entry, the procedure will time out and you will have to begin again.

To review a number in a speed dial memory location

To review a number in a speed dial memory location, lift the handset and hold down the switch hook on the handset, then press **MEMORY** and the dialing keys (0 through 9). The number stored in that speed dial memory location is displayed on the screen.

To dial a number in a speed dial memory location

1. Lift the handset and press **MEMORY**.
2. Use the dialing keys (0 through 9) to choose the desired speed dial memory location. The telephone automatically dials the telephone number stored in the selected speed dial memory location.

Caller ID overview

About caller ID

This product supports caller ID services that most local telephone service providers offer. There is a fee for this service, and it might not be available in all areas. Caller ID with call waiting lets you see the name and telephone number of the caller before answering the telephone, even when on another call.

It may be necessary to change your telephone service to use this feature. Contact your telephone service provider if:

- You have both caller ID and call waiting, but as separate services (you may need a combined service).
- You have only caller ID service, or only call waiting service.
- You do not have any caller ID or call waiting services.

This product can be used with regular caller ID service, or this product's other features can be used without subscribing to either caller ID or combined caller ID with call waiting service.

Depending on your service, you may see the caller's number or the caller's name and number. This product can provide information only if both you and the caller are in areas offering caller ID service and if both telephone service providers use compatible equipment. The time and date are sent by the telephone service provider along with the call information.


How caller ID works

If you subscribe to caller ID service provided by your telephone service provider, information about each caller appears between the first and second ring. If an incoming call is answered before the information appears on the screen, no information is stored or displayed.



Caller ID overview

This telephone deletes the earliest entry when the log is full to make room for new calls. The call log stores information about the last 80 incoming calls.

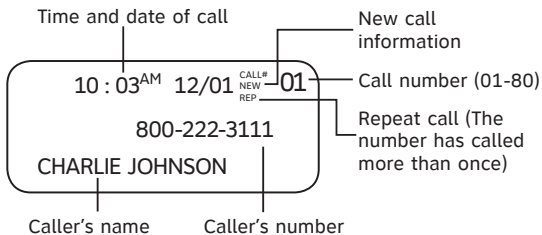


NOTES:

- The caller's name (up to 16 characters) is sent by your telephone service provider if you subscribe to caller ID/call waiting service.
- The area code of the caller is not displayed if it is programmed as the home area code.
- If you do not answer a call, the screen displays the call information for about 10 seconds after the ringing stops.

How call log works

A number (from 01 to 80) is assigned for each incoming call. The most recent call will have the highest number. If you receive more than one call from a particular telephone number, only the newest entry from that number will be saved and **REP** appears with the caller ID entry. When the memory is full, the oldest call information is replaced by the new incoming call information.

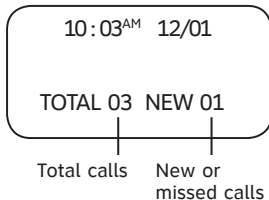

Caller ID overview

Caller ID special messages


Screen display	Reason
PRIVATE	The caller is blocking the name information.
PPP	The caller is blocking the number information.
PRIVATE CALLER	The caller is blocking the name and number information.
UNKNOWN	Your telephone service provider is unable to receive this caller's name.
UUU	Your telephone service provider is unable to receive this caller's number.
UNKNOWN CALLER	Your telephone service provider is unable to receive this caller's name and number.
LONG DISTANCE	This is a long distance call and there is no information about this caller's name.

Reviewing the call log

To review the call log

You can access the call log while the handset is lifted or on the base.

1. Press ▼ or ▲ to access the call list and display the latest caller ID entry.
2. Press ▼ repeatedly to scroll through the call list, which is in reverse chronological order (from the newest entry to the oldest entry), or press ▲ repeatedly to scroll through the call list in chronological order. At the end of the call list, the screen displays **-END OF LIST-**.



Reviewing the call log

To dial the displayed number

To dial a call log number currently displayed, follow the steps below:

1. Press **DISPLAY DIAL**. The screen displays **LIFT RECEIVER**.

- OR -

Press **OPTION/SELECT** repeatedly to display different dialing options for local and long distance numbers. When the number is displayed in the desired format, press **DISPLAY DIAL**.

2. Lift the handset to dial the number. If you do not do so within 10 seconds after the screen displays **LIFT RECEIVER**, the telephone returns to idle mode.

- OR -

Press **CLEAR** twice to return to idle mode.

i NOTE: If you have entered a home area code, telephone numbers from that area code may be displayed without the preceding 1, but they will be dialed correctly.

Deleting call log entries

To delete a call log entry



You can delete an entry or all entries in the call log by following the steps below.

To delete an entry:

1. Press ▼ or ▲ to display the call log.
2. Press **REMOVE** to delete the entry currently displayed.

- OR -

Press **CLEAR** to exit without deleting any entries and return to idle mode.



Deleting call log entries

To delete all call log entries

1. Press and hold **REMOVE** when reviewing the call log entries.

The screen displays **REMOVE ALL?**

2. Press **REMOVE** again to delete all the entries. The screen displays **-END OF LIST-** and automatically returns to idle mode.

- OR -

Press **CLEAR** to exit without deleting any entries and return to idle mode.

10:03^{AM} 12/01

REMOVE ALL?

10:03^{AM} 12/01

-END OF LIST-

i **NOTE:** When an entry is removed from the call log, it cannot be retrieved.

Copying a call log entry into memory

When you are reviewing call log entries, you can copy the displayed telephone number to a one-touch or speed dial memory location.

1. Lift the handset.
2. Press ▼ or ▲ to scroll to your desired entry.
3. Press **PROG** on the handset.
4. Press any one-touch memory location (**M1**, **M2** or **M3**) where you want the number to be stored.

- OR -

Press **MEMORY**, then press the dialing key (**0** through **9**) to select the desired speed dial memory location.

5. Press **CLEAR** on the back of the handset when you have finished storing a number in the memory to exit programming.

10:03^{AM} 12/01 CALL# NEW REP 01

800-222-3111

CHARLIE JOHNSON



i **NOTE:** If you wait longer than 10 seconds to delete or copy the entry, the procedure will time out and you have to begin again.

Troubleshooting

If you have difficulty with your telephone, please try the suggestions below. For customer service, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

There is no dial tone.

- Inspect the telephone line cord connection at the telephone wall jack. Make sure the cord is connected properly and securely.
- Inspect the handset cord connections at both ends.
- If the previous suggestions do not work, disconnect the telephone base from the telephone jack and connect to a different telephone. If there is no dial tone on that telephone either, the problem is in your wiring or local service. Contact your telephone service provider.

Telephone does not ring.

- Make sure the **RINGER** switch on the side of the telephone base is not set to **OFF**.
- If there are other telephones on the same line, try disconnecting some of them. Having too many telephones connected can create problems such as low ringer volume or impaired sound quality during calls.

Difficulty storing numbers in memory.

- Make sure you are pressing the correct sequence of keys for storing numbers (see pages 20 and 22).
- If you pause for over 10 seconds when programming an entry, the procedure will time out and you will have to begin again.
- Try calling the number to be stored in memory. When the call ends, press **PROG**, **PAUSE/REDIAL**, then a one-touch key (**M1**, **M2** or **M3**), or **MEMORY** and a memory location (**0-9**).

Troubleshooting

IN USE light does not go on.

- Make sure four new AA batteries have been installed properly (see **Battery installation** on page 6).

The IN USE light is flashing slowly.

- Make sure that all telephones on the same line are hung up.
- Inspect the telephone line cord connection at the wall jack.

Screen is blank.

- Make sure the coiled handset cord is properly and securely connected to the handset and the telephone base.
- Make sure four new AA batteries are installed properly (see **Battery installation** on page 6).
- You must subscribe to caller ID service from your telephone service provider to see call information on the screen (see **About caller ID** on page 23).

My caller ID features are not working properly.

- Caller ID is a subscription service. You must subscribe to this service from your telephone service provider for this feature to work on your telephone.
- The caller may not be calling from an area that supports caller ID. Both your and the caller's telephone service providers must use equipment which are compatible with caller ID service.
- Make sure your service provides caller ID information when on a call. This is sometimes known as caller ID with call waiting, or type II caller ID.
- Make sure you have installed four new AA batteries properly (see **Battery installation** on page 6).

Troubleshooting

- If you subscribe to high-speed Internet service (DSL - digital subscriber line) through your telephone line, you must install a DSL filter between the telephone line cord and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

I subscribe to a nontraditional telephone service that uses my computer to establish connections, and my telephone doesn't work.

- Make sure your computer is powered on.
- Make sure your Internet connection is working properly.
- Make sure that the software is installed and running for your nontraditional telephone service.
- Make sure to plug your USB telephone adapter into a dedicated USB port on your computer. Do not plug it into a multiple port USB hub (USB splitter) that is not powered.
- In a few rare cases, the USB port on your computer may not have enough power. In these cases, try using a USB hub with its own external power supply.
- If you are using a firewall, it may prevent access to your nontraditional telephone service. Contact your service provider for more information.

General product care

To keep your telephone working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.
- Avoid dropping the telephone or treating it roughly.
- Clean with a soft cloth.
- Never use a strong cleaning agent or abrasive powder because this can damage the finish.
- Retain the original packaging in case you need to ship it at a later date.

Technical specifications

Operation temperature	32°F - 122°F 0°C - 50°C
REN (Ringer Equivalence Number)	0.7B

Important safety information



This symbol is to alert you to important operating or servicing instructions that may appear in this user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electric shock.

Safety information

- **Read and understand all instructions in the user's manual. Observe all markings on the product.**
- **Avoid using a telephone during a thunderstorm.** There may be a slight chance of electric shock from lightning.
- **Do not use a telephone in the vicinity of a gas leak.** Do not use a telephone in the vicinity of a gas leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- **Do not use this product near water, or when you are wet.** For example, do not use it in a wet basement or shower, or next to a swimming pool, bathtub, kitchen sink, or laundry tub. Do not use liquids or aerosol sprays for cleaning. If the product comes in contact with any liquids, unplug any line or power cord immediately. Do not plug the product back in until it has dried thoroughly.
- **Install this product in a protected location** where no one can trip over any line. Protect cords from damage or abrasion.
- **If this product does not operate normally, read the Troubleshooting on pages 28-30 of this user's manual.** If you cannot solve the problem, or if the product is damaged, refer to the **Limited warranty** on pages 35-37. Do not open this product except as may be directed in your user's manual. Opening the product or reassembling it incorrectly may expose you to hazardous voltages or other risks.
- **If this product has replaceable batteries, replace batteries only as described in your user's manual (see Battery installation on page 6).** Do not burn or puncture batteries - they contain caustic chemicals.
- **If this product has a three-prong (grounding) plug or a polarized plug with one wide prong, it may not fit in outlets that are not polarized.** Do not defeat the purpose of these plugs. If they do not fit in your outlet, the outlet should be replaced by an electrician.

FCC and ACTA information

If this equipment was approved for connection to the telephone network prior to July 23, 2001, it complies with Part 68 of the Federal Communications Commission (FCC) rules. If the equipment was approved after that date, it complies with the Part 68 rules and with the Technical Requirements for Connection of Equipment to the Telephone Network adopted by the Administrative Council for Terminal Attachments (ACTA). We are required to provide you with the following information.

1. Product identifier and REN information

The label on the back or bottom of this equipment contains, among other things, an identifier indicating product approval and the Ringer Equivalence Number (REN). This information must be provided to your telephone service provider upon request. For equipment approved prior to July 23, 2001, the product identifier is preceded by the phrase "FCC Reg No." and the REN is listed separately. For equipment approved after that date, the product identifier is preceded by "US" and a colon (:), and the REN is encoded in the product identifier without a decimal point as the sixth and seventh characters following the colon. For example, the product identifier US:AAAEQ03T123XYZ indicates the REN would be 0.3.

The REN is used to determine how many devices you can connect to your telephone line and still have them ring when you are called. In most, but not all areas, the sum of all RENS should be five (5.0) or less. You might want to contact your telephone service provider for more information.

2. Connection and use with the nationwide telephone network

The plug and jack used to connect this equipment to the premises wiring and the telephone network must comply with the applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular wall jack that is also compliant. An RJ11 jack should normally be used for connecting to a single line and an RJ14 jack for two lines, see installation instructions in the user's manual. This equipment may not be used with coin telephone lines or with party lines. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, consult your telephone service provider or qualified installer.

3. Repair instructions

If this equipment is malfunctioning, it must be unplugged from the modular wall jack until the problem has been corrected. Repairs to this telephone equipment can only be made by the manufacturer or its authorized agents. For repair procedures, follow the instructions outlined under the limited warranty.

FCC and ACTA information

4. Rights of the telephone service provider

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and the telephone service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment, operation, or procedures that could affect the proper functioning of this product. The telephone service provider is required to notify you if such changes are planned.

5. Hearing aid compatibility

If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

6. Programming/testing of emergency numbers

If this product has memory dialing locations, you may choose to store police, fire department and emergency medical service telephone numbers in these locations. If you do, please keep three things in mind:

- a. We recommend that you also write the telephone number on the directory card (if applicable), so that you can still dial the emergency number manually if the memory dialing feature doesn't work.
- b. This feature is provided only as a convenience, and the manufacturer assumes no responsibility for customer reliance upon the memory feature.
- c. Testing the emergency telephone numbers you have stored is not recommended. However, if you do make a call to an emergency number:
 - You must remain on the line and briefly explain the reason for the call before hanging up.
 - Programming/testing of emergency numbers should be performed during off-peak hours, such as in the early morning or late evening, when the emergency services tend to be less busy.

FCC Part 15

Some telephone equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used properly, may cause interference to radio and television reception. This product has been tested and found to meet the standards for a class B digital device, as specified in Part 15 of the FCC rules.

These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

FCC Part 15

If this product causes interference to radio, VCR or television reception when it is in use, you might correct the interference with any one or all of these measures:

- Where it can be done safely, reorient the receiving radio, VCR or television antenna.
- To the extent possible, relocate the radio, VCR, television or other receiver with respect to the telephone equipment.
- If this telephone product runs on AC power, plug your product into an AC outlet that's not on the same circuit as one used by your radio, VCR or television.
- Consult a dealer or an experienced radio/TV technician for help.

Modifications to this product, not expressly approved by the manufacturer, could void the user's authority to operate the equipment.

Limited warranty

The AT&T brand is used under license - any repair, replacement or warranty service, and all questions about this product should be directed to: In the United States of America, call **1 (800) 222-3111** or visit **www.telephones.att.com**. In Canada, dial **1 (866) 288-4268**.

1. What does this limited warranty cover?

The manufacturer of this AT&T branded product warrants to the holder of a valid proof of purchase ("CONSUMER" or "you") that the product and all accessories provided in the sales package ("PRODUCT") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the PRODUCT operating instructions. This limited warranty extends only to the CONSUMER for products purchased and used in the United States of America and Canada.

2. What will be done if the PRODUCT is not free from defects in materials and workmanship during the limited warranty period ("materially defective PRODUCT")?

During the limited warranty period, the manufacturer's authorized service representative repairs or replaces at the manufacturer's option, without charge, a materially defective PRODUCT. If the manufacturer repairs the PRODUCT, they may use new or refurbished replacement parts. If the manufacturer chooses to replace the PRODUCT, they may replace it with a new or refurbished PRODUCT of the same or similar design. The manufacturer retains the defective parts, modules, or equipment. Repair or replacement of the PRODUCT, at the manufacturer's option, is your exclusive remedy. The manufacturer returns the repaired or replacement products to you in working condition. You should expect the repair or replacement to take approximately 30 days.

Limited warranty

3. How long is the limited warranty period?

The limited warranty period for the PRODUCT extends for ONE (1) YEAR from the date of purchase. If the manufacturer repairs or replaces a materially defective PRODUCT under the terms of this limited warranty, this limited warranty also applies to repaired or replacement PRODUCT for a period of either (a) 90 days from the date the repaired or replacement PRODUCT is shipped to you or (b) the time remaining on the original one-year limited warranty; whichever is longer.

4. What is not covered by this limited warranty?

This limited warranty does not cover:

- PRODUCT that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water, or other liquid intrusion; or
- PRODUCT that has been damaged due to repair, alteration, or modification by anyone other than an authorized service representative of the manufacturer; or
- PRODUCT to the extent that the problem experienced is caused by signal conditions, network reliability or cable or antenna systems; or
- PRODUCT to the extent that the problem is caused by use with non-AT&T accessories; or
- PRODUCT whose warranty/quality stickers, PRODUCT serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- PRODUCT purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to products used for rental purposes); or
- PRODUCT returned without a valid proof of purchase (see item 6 below); or
- Charges for installation or setup, adjustment of customer controls, and installation or repair of systems outside the unit.

5. How do you get warranty service?

To obtain warranty service in the United States of America, visit **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

NOTE: Before calling for service, please review the user's manual. A check of the PRODUCT controls and features might save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the PRODUCT(s) to the service location.

Limited warranty

The manufacturer will return repaired or replaced PRODUCT under this limited warranty. Transportation, delivery or handling charges are prepaid. The manufacturer assumes no risk for damage or loss of the PRODUCT in transit. If the PRODUCT failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, the manufacturer notifies you and requests that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of products that are not covered by this limited warranty.

6. What must you return with the PRODUCT to get warranty service?

You must:

- a. Return the entire original package and contents including the PRODUCT to the service location along with a description of the malfunction or difficulty; and
- b. Include a "valid proof of purchase" (sales receipt) identifying the PRODUCT purchased (PRODUCT model) and the date of purchase or receipt; and
- c. Provide your name, complete and correct mailing address, and telephone number.

7. Other limitations

This warranty is the complete and exclusive agreement between you and the manufacturer of this AT&T branded PRODUCT. It supersedes all other written or oral communications related to this PRODUCT. The manufacturer provides no other warranties for this PRODUCT. The warranty exclusively describes all of the manufacturer's responsibilities regarding the PRODUCT. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you might also have other rights that vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the PRODUCT is fit for ordinary use) are limited to one year from date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation might not apply to you. In no event shall the manufacturer be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the PRODUCT or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this PRODUCT. Some states/provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion might not apply to you.

Please retain your original sales receipt as proof of purchase.

Index

A

Adjust ringer volume, 18

Answer a call, 18

B

Battery installation, 6

C

Caller ID, 23

Call list, 25

Call log, 25

CLEAR key, 2, 12

Contrast, 14

Copy into memory, 27

D

Deleting call log entries, 27

Dialing options, 26

Dialing the displayed number, 26

Directory card, 21

DISPLAY DIAL key, 2, 26

F

FCC, 33–35

Feature summary, 13

FLASH key, 2, 19

G

General product care, 31

H

Handset layout, 2–3

Handset volume, 18

Home area code, 14

I

Installation, 6–11

IN USE light, 2, 6

L

Language, 17

Last number redial, 18

Limited warranty, 35–37

Listening volume, 18

Local area codes, 15

M

M1, M2, M3 keys, 3, 20–21

Make a call, 18

MEMORY key, 3, 22

Mute, 19

O

One-touch, 20–21

OPTION/SELECT key, 2, 12

P

PAUSE key, 3, 22

PROG key, 3, 20, 22

R

Redial, 18

REMOVE key, 2, 26, 27

Reviewing the call log, 25

Ringer volume, 18

S

Screen display, 4

Speed dial, 22

Store a number in memory, 20, 22

T

Technical specifications, 31

Temporary tone dialing, 19

Time and date, 16

Tone/pulse, 17

Troubleshooting, 28–30

V

Volume, 18



www.telephones.att.com

Trimline® is a registered trademark of Advanced American Telephones.

© 2009-2012 Advanced American Telephones. All Rights Reserved.
AT&T and the AT&T logo are trademarks of AT&T Intellectual Property
licensed to Advanced American Telephones, San Antonio, TX 78219.
Printed in China. Issue 9 AT&T 04/12.